



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3205	COWL, BOTTOM	1		
1	2115	3617	COWL, BOTTOM	.1		
2		47261A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
2		52862A 1	DRIP TRAY ASSEMBLY, BOTTOM	.1		
3		37940	PAD, SOUND - DRIP TRAY	1,1		
4		37903	FLANGE, RUBBER - DRIP TRAY	1,1		
5	10	34222	SCREW, DRIP TRAY TO BOTTOM	4,4		
6	32	52032	HOSE, DRIP TRAY TO BOTTOM	1,1		
7		37638	BOOT, CONTROL CABLES - BOT	1,1		
8		23760	BAFFLE, BOTTOM COWL	1,1		
9	10	21106	SCREW, BAFFLE TO BOTTOM CC	3		
9	10	52867	SCREW, BAFFLE TO BOTTOM CC	.3		
10		37637	BOOT, FUEL CONNECTOR - BOT	1,1		
11		37445	SUPPORT, WIRING HARNESS - E	1,1		
12	10	37990	SCREW, WIRING HARNESS SUP	.1		
12	10	37990	SCREW, WIRING HARNESS SUP	2(1)		*
13	11	46887	NUT, WIRING HARNESS SUPPOI	.1		
13	11	46887	NUT, WIRING HARNESS SUPPOI	.2(1)		*
14	32	34395A 1	HOSE, TELL TALE - EXHAUST C	1,1		
15	22	29111	CONNECTOR, TELL TALE HOSE	1		
15A		52889	NOZZLE, TELL TALE HOSE TO B	.1		
16	10	34222	SCREW, TELL TALE NOZZLE TO	.1		
17	22	25885	ELLBOW, TELL TALE HOSE TO E	1,1		
18	54	48123	CLAMP, TELL TALE HOSE TO CO	2,2		
19	27	47257	GASKET, POWERHEAD TO EXHA	1,1		4
20		38468A 4	PLATE ASSEMBLY, EXHAUST EX	1	SERIAL 00000000-02409053	
20		49087A 2	PLATE ASSEMBLY, EXHAUST EX	1	SERIAL 02409054-09999999	
20		52932A 2	PLATE ASSEMBLY, EXHAUST EX	.1		
21	26	38970	SEAL, RUBBER - WATER INLET	1,1		4
22		38448	RETAINER, WATER TUBE SEA	1,1		
23	10	34439	SCREW, RETAINER TO EXHAU	1,1		
24	10	22421	SCREW, EXHAUST EXTNSN PLA	1		
24	10	24226	SCREW, EXHAUST EXTNSN PLA	.1		
25	11	46887	NUT, EXHAUST EXTENSION PLA	1,1		
26	27	38471	GASKET, EXHAUST EXTENSION	1,1		4
27		37918	SEAL, EXHAUST EXTENSION PL	1,1		
28		38032	STRIP, RETAINING - EXHAUST E	1,1		
29	10	37571	SCREW, SEAL AND RETAINING	5,5		
30		47325A 1	SHIFT SHAFT ASSEMBLY, UPPE	1		
30		47326A 1	SHIFT SHAFT ASSEMBLY, UPPE	1		
30		49904A 1	SHIFT SHAFT ASSEMBLY, UPPE	1	SERIAL 00000000-02681191	