



| Parts List |       |          |                             |     |         |          |
|------------|-------|----------|-----------------------------|-----|---------|----------|
| Ref        | Class | Part     | Description                 | Qty | Comment | Footnote |
| 1          | 45    | 47950    | DRIVE SHAFT, DISTRIBUTOR    | 1,1 |         |          |
| 2          |       | 45960A 1 | PILOT ASSEMBLY, DISTRIBUTOR | 1,1 |         |          |
| 3          | 12    | 45484    | WASHER, DISTRIBUTOR TO PILO | 1,1 |         |          |
| 4          | 30    | 20066    | BEARING, BALL - DISTRIBUTOR | 1,1 |         |          |
| 5          | 24    | 29275    | SPRING, HORSESHOE           | 1,1 |         |          |
| 6          | 17    | 27962    | PIN, SPRING TERMINAL        | 1,1 |         |          |
| 7          |       | 32197    | STOP, SPRING TERMINAL       | 1,1 |         |          |
| 8          |       | 30580A 1 | ECONOMIZER COLLAR AND PIN   | 1,1 |         |          |
| 9          | 17    | 27961    | PIN, SPRING RETAINER        | 1,1 |         |          |
| 10         | 22    | 25094    | FITTING, GREASE - ECONOMIZ  | 1,1 |         |          |
| 11         |       | 48321    | ACTUATOR, THROTTLE          | 1,1 |         |          |
| 12         | 10    | 23015    | SCREW, ADJUSTING - THROTTL  | 1,1 |         |          |
| 13         | 11    | 20645    | NUT< THROTTLE ACTUATOR AC   | 1,1 |         |          |
| 14         |       | 48039    | CAP, THROTTLE ACTUATOR AD.  | 1,1 |         |          |
| 15         | 10    | 20100    | SCREW, THROTTLE ACTUATOR    | 2,2 |         |          |
| 16         | 13    | 26996    | LOCKWASHER, THROTTLE ACTI   | 2,2 |         |          |
| 17         | 12    | 20128    | WASHER, THROTTLE ACTUATO    | 2,2 |         |          |
| 18         |       | 30645    | ADAPTOR, DISTRIBUTOR        | 1,1 |         |          |
| 19         | 22    | 25094    | FITTING, GREASE - ADAPTOR   | 1,1 |         |          |
| 20         |       | 30585    | BRACKET, STOP               | 1,1 |         |          |
| 21         | 10    | 28636    | SCREW< STOP BRACKET TO DIS  | 2,2 |         |          |
| 22         | 12    | 20533    | WASHER, STOP BRACKET FAST   | 2,2 |         |          |
| 23         | 10    | 24228    | SCREW, STOP BRACKET ADJUS   | 3,3 |         |          |
| 24         | 11    | 20890    | NUT, STOP BRACKET ADJUSTIN  | 3,3 |         |          |
| 25         |       | 26852    | CAP, NYLON - ADJUSTING SCRE | 3,3 |         |          |
| 26         | 10    | 22040    | SCREW, ADAPTOR AND PILOT T  | 3,3 |         |          |
| 27         | 12    | 20084    | WASHER, ADAPTOR AND PILOT   | 3,3 |         |          |
| 28         | 11    | 20083    | NUT, ADAPTOR AND PILOT FAS  | 3,3 |         |          |
| 29         | 12    | 27939    | WASHER, THRUST - DISTRIBUT  | 1,1 |         |          |
| 30         | 14    | 27960    | TAB WASHER, CAP LOCKING     | 1,1 |         |          |
| 31         | 13    | 27959    | WASHER, WAVE - TAB WASHER   | 1,1 |         |          |
| 32         |       | 27955    | CAP, ADAPTOR AND PILOT FAST | 1,1 |         |          |
| 33         | 10    | 20532    | SCREW, ADAPTOR AND PILOT T  | 4,4 |         |          |
| 34         | 13    | 26992    | LOCKWASHER, ADAPTOR AND F   | 4,4 |         |          |
| 35         | 23    | 29909    | SPACER, DRIVEN PULLEY       | 1,1 |         |          |
| 36         |       | 29906A 1 | DRIVEN PULLEY ASSEMBLY      | 1,1 |         |          |
| 37         | 17    | 29908    | PIN, DRIVEN PULLEY          | 1,1 |         |          |
| 38         |       | 29907    | FLANGE, DRIVE PULLEY        | 1,1 |         |          |
| 39         | 28    | 29910    | KEY, DISTRIBUTOR DRIVING    | 1,1 |         |          |
| 40         | 10    | 20456    | SCREW, PULLEY CLAMPING (5/8 | 1,1 |         |          |
| 41         | 12    | 26996    | LOCKWASHER, PULLEY CLAMP    | 1,1 |         |          |