



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	2799A11	DISTRIBUTOR ASSEMBLY, COM	1,1		
1	393	2799A21	HOUSING ASSEMBLY, PRIMAR	1,1		
2	13	26917	WASHER, WAVE - PRIMARY HI	2,2		
3	30	26379	BEARING, BALL - ROTOR SHAF	2,2		
4	53	45906	RING, RETAINER - ROTOR SHAF	2,2		
5	393	3269A 1	ROTOR SHAFT ASSEMBLY	1,1		
6	393	2795	SHIM, TRIGGER HOUSING TO I	AR,AR		
7	393	2918A 3	TRIGGER HOUSING ASSEMBL	1,1		
8	10	20646	SCREW, SHIM/TRIGGER HOU	2,		
8	10	45218	SCREW, SHIM/TRIGGER HOU	2,2		*
9	393	3014A 2	ADAPTOR ASSEMBLY, HOUSIN	1,1		
10	27	46351	GASKET, ADAPTOR TO PRIM	1,1		4
11	17	20032	DOWEL PIN, ADAPTOR TO PI	2,2		
12	10	32627	SCREW, ADAPTOR TO HOUSIN	2,2		
13	11	46438	NUT, ADAPTOR TO HOUSING	2,2		
14	22	31521A 1	ELBOW ASSEMBLY, VENT HO	1,1		
15	27	36268	GASKET, DISTRIBUTOR TO AD	1,1		4
16	393	1927A 9	DISTRIBUTOR CAP ASSEMBLY	1,1		
17	393	1293A 1	BRUSH AND SPRING ASSEM	1,1		
18	22	31521	ELBOW, VEN HOSE - DISTRIB	1,1		
19	10	45914	SCREW, DISTRIBUTOR CAP TO	4,4		
20	12	26436	WASHER, DISTRIBUTOR CAP	4,4		
21	11	46438	NUT, DISTRIBUTOR CAP FAST	4,4		
22	393	2725	COVER, SIDE INLET - DISTRIB	1,1		
23	27	26447	GASKET, SIDE INLET COVER T	1,1		4
24	10	35400	SCREW, SIDE INLET COVER TI	2,2		
25	393	3250A 1	HIGH TENSION CABLE ASSEM	1,1		
--		20121	CONNECTOR, HIGH TENSION	1,1		
26	393	1275	SLEEVE, TERMINAL COVER	1,1		
27	25	26547	GROMMET, HIGH TENSION C	1,1		
28	332	2854	BOOT, HIGH TENSION CABLE	1,1		
26	393	1275	SLEVE, TERMINAL END COVEF	6,6		
27	25	26547	GROMMET, SPARK PLUG LEAD	12,12		
29		47899A 9	SPARK PLUG LEAD ASSEMBLY	6,6		
--		20121	CONNECTOR, SPARK PLUG L	6,6		
30		47604A 1	PROTECTOR, SPARK PLUGG L	6,6		