



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	2460A31	GEAR HOUSING ASSEMBLY, CO	1		
-	1623	2460A32	GEAR HOUSING ASSEMBLY, CO	1		
-	1623	3486A 8	GEAR HOUSING ASSEMBLY, CO	.1		
-	1623	3486A 9	GEAR HOUSING ASSEMBLY, CO	.1		
1	1623	2460A20	GEAR HOUSING ASSEMBLY	1		
1	1623	3486A 4	GEAR HOUSING ASSEMBLY	.1		
2	16	45199	STUD, GEAR HOUSING TO D	1,1		
3	16	45198	STUD, GEAR HOUSING TO D	2		
3	16	52614	STUD, GEAR HOUSING TO D	.2		
4	16	36292	STUD, WATER PUMP BASE&	1,1		
5	16	37435	STUD, WATER PUMP BASE&	2,2		
6	31	32898	BEARING, ROLLER - DRIVE S	1,1		
7	45	47433	DRIVE SHAFT (SHORT SHAFT)	1,1		
7	45	47434	DRIVE SHAFT (LONG SHAFT)	1,1		
8	43	47351	GEAR, PINION - DRIVE SHAFT	1		
9	11	47411	NUT, PINION GEAR TO DRIVE	.1		
8	43	49751	GEAR, PINION - DRIVE SHAFT	.1		
9	11	35921	NUT, PINION GEAR TO DRIVE	.1		
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR		
11	30	20464	BEARING, BALL - DRIVE SHAFT	1,1	SERIAL 00000000-02573851	
11	30	54215	BEARING, BALL - DRIVE SHAFT	1,1	SERIAL 02573852-09999999	
12	53	30726	RING, RETAINING - BALL BEAR	.1		
10	15	30278A 1	SHIM, WATER PUMP BASE TO	AR,AR		
13	27	32438	GASKET, WATER PUMP BASE	1,1		4
14	25	30224	"O" RING, WATER PUMP BASE	1,1		4
15	46	38931A 1	WATER PUMP BASE ASSEMBL	1,1		
15	46	48747A 1	WATER PUMP BASE ASSEMBL	1		
16	26	31489	OIL SEAL, WATER PUMP BAS	.1		
17	26	31507	OIL SEAL, WATER PUMP BAS	.1		
18	17	35973	DOWEL PIN, WATER PUMP E	2,2		
19	27	32433	GASKET, LOWER - WATER PUI	1,1		4
20		32435	PLATE, FACE - WATER PUMP E	1,1		
21	27	32434	GASKET, UPPER - FACE PLATE	1,1		4
22	46	37433A 1	WATER PUMP BODY ASSEMBL	1,1		
22	46	48743A 1	WATER PUMP BODY ASSEMBL	1		
23		30915	INSERT, WATER PUMP BOD	.1		
23		48752	INSERT, WATER PUMP BOD	1		
24	26	31507	OIL SEAL, WATER PUMP BOI	.1		
25	26	38970	SEAL, RUBBER - WATER INLI	1,1		4
26	47	30221	IMPELLER, WATER PUMP	1,1		
27	17	28967	PIN, IMPELLER DRIVE	1,1		