

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		48150	WIRING HARNESS, INTERNAL	1		
1		52769	WIRING HARNESS, INTERNAL	.1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3	54	26538	CLIP, WIRING HARNESS TO FRO	1,1		
4		22789	"D" WASHER, WIRING HARNESS	1,1		
5	10	30009	SCREW, WIRING HARNESS CLIF	1,1		
6		26079	PLATE, WIRING HARNESS TO B	1,		
7	10	45893	SCREW, HARNESS PLATE FASTI	4,		
8	54	52876	CLAMP, WIRING HARNESS TO B	.1		
9	10	45862	SCREW, WIRING HARNESS CLAI	2		
10	13	26396	LOCKWASHER, WIRING HARNE	.2		
11	12	20128	WASHER, WIRING HARNESS CL	.2		
12	24	28975	SPRING, GARTER - INTERNAL w	1,1		
13	10	20776	SCREW, GROUND WIRE TO BOT	1,1		
14	13	25244	LOCKWASHER, GROUND WIRE	1,1		
15	13	24669	LOCKWASHER, GROUND WIRE	1,		
16	332	2910A 3	RECTIFIER ASSEMBLY	1,1		
17	10	31294	SCREW, RECTIFIER TO MOUNTI	2,2		
18	11	46887	NUT, RECTIFIER MOUNTING SCI	2,2		
19	12	45075	WASHER, RECTIFIER STATOR L	3,3		
20	11	45076	NUT, FASTENING - RECTIFIER S	3,3		
21	50	45822A 1	STARTER MOTOR ASSEMBLY	1,1		
22		37331	PLATE, SPACER - STARTER MOT	1,1		
23	10	22698	SCREW, STARTER MOTOR TO C	2,2		
24	13	26993	LOCKWASHER, STARTER MOTO	2,2		
25		38747	BRACKET, SUPPORT - STARTER	1,1		
26	13	24669	LOCKWASHER, THRU BOLT	2,2		
27	11	20088	NUT, BOLT - BRACKET TO STAR	2,2		
28		25596	CABLE, WIRE - STARTER MOTO	1,1		
29	10	29197	SCREW, HARNESS GROUND LE	1,1		
30	13	26392	LOCKWASHER, STARTER MOTO	1,1		
31	11	20890	NUT, STARTER MOTOR TERMIN	1,1		
32		48396	CABLE, WIRE - STARTER MOTO	1,1		
33		25661	SOLENOID, STARTER	1,1		
--		26901	BUMPER, STARTER SOLENOID	1,1		
34		46466	GROUND STRAP ASSEMBLY, ST	1,		
35	13	26993	LOCKWASHER, SOLENOID TERM	2,2		
36	11	20083	NUT, SOLENOID TERMINAL (5/11)	2,2		
37	13	26996	LOCKWASHER, SOLENOID TERM	2,2		
38	11	20645	NUT, SOLENOID TERMINAL (#10	2,2		
39	10	21625	SCREW, SOLENOID TO COIL BR	2,2		

