



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	3367A 1	END CAP ASSEMBLY, UPPER	1,1		
2	26	29476	OIL SEAL	1,1		
3	25	31305	"O" RING	1,1		4
4	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
5	10	30225	SCREW, END CAP MOUNTING (1	4,4		
6	836	3260A 3	CYLINDER BLOCK AND CRANKC.	1,1		
7	22	32802	PLUG, PIPE - WATER PRESSU	1,1		
8	16	35099	STUD, CARBURETOR MOUNTI	6,6		
9	16	26133	STUD, CRANKCASE TO DRIVE	2,2		
10	17	20033	PIN, DOWEL - CRANKCASE TO	2,2		
11	17	20032	PIN, DOWEL - CYLINDER BLOC	3,3		
12	16	26134	STUD, CYLINDER BLOCK TO D	2,2		
13	16	37653	STUD, CYLINDER BLOCK TO D	2,	SERIAL 02409053-09999999	
14	16	26135	STUD, CYLINDER BLOCK TO D	2,	SERIAL 02409053-09999999	
14	16	48770	STUD, CYLINDER BLOCK TO D	4,4		
15	10	29877	SCREW, CRANKCASE TO CYLIN	3,3		
15	10	26132	SCREW, CRANKCASE TO CYLIN	2,2		
16	10	21574	SCREW, CRANKCASE TO CYLIN	1,1		
16	10	32293	SCREW, CRANKCASE TO CYLIN	2,2		
--	12	26825	WASHER, CRANKCASE TO CYLIN	2,2		
16	10	22040	SCREW, CRANKCASE TO CYLIN	17,17		
16	10	33860	SCREW, CRANKCASE TO CYLIN	1,1		
17	11	46793	NUT, CRANKCASE FASTENING S	26,26		
18		26551	BRACKET, CLAMP EXTENSION	2,2		
19	10	36351	SCREW, MAIN BEARING LOCKIN	3,3		
20	10	20359	SCREW, CENTER MAIN BEARIN	2,2		
21	14	20091	TAB WASHER, BEARING LOCKIN	5,5		
22	1126	3369A 1	END CAP ASSEMBLY, LOWER	1,		
22	1126	3369A 2	END CAP ASSEMBLY, LOWER	,1		
23	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1		
24	26	29478	OIL SEAL, LOWER	1,		
25	26	29476	OIL SEAL, UPPER	1,		
25	26	29476	OIL SEAL, UPPER	,2		
26	25	20081	"O" RING	1,1		4
27	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR,AR		
28	10	30225	SCREW, END CAP MOUNTING (1	3,3		
29	27	37740	GASKET, CYLINDER BLOCK TO E	1,1		4
30		47660	PLATE, BAFFLE - EXHAUST MAN	1,1		
31	27	37741	GASKET, BAFFLE PLATE TO EXH	1,1		4
32		37674	COVER, EXHAUST MANIFOLD	1,1		
32	10	28827	SCREW, MANIFOLD COVER MOL	22,22		