



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1552	2463A 5	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 00000000-02409053	
1	1551	2459A 8	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 00000000-02409053	
1	1552	3429A 3	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 02409054-09999999	
1	1551	3428A 4	DRIVE SHAFT HOUSING ASSEM	1	SERIAL 02409054-09999999	
1	1552	3670A 3	DRIVE SHAFT HOUSING ASSEM	1		
1	1551	3669A 4	DRIVE SHAFT HOUSING ASSEM	1		
2	16	47165	STUD, DRIVE SHAFT HOUSING	2		
2	16	46910	STUD, DRIVE SHAFT HOUSING	2		
3	19	47579	PLUG, PLASTIC - TRIM TAB SCI	1,1		
4	10	48409	SCREW, RETAINING STRIP TO	2,2		
5	10	48408	SCREW, RETAINING STRIP TO	6,6		
6		37417	COVER, TRIM - DRIVE SHAFT HC	1,1		
7	10	37571	SCREW, TRIM COVER TO BOTTC	4,4		
8		37919	SEAL, TRIM COVER TO DRIVE SH	1,1		
9		37665	STRIP, RETAINING - TRIM COVEI	1,1		
10		38052	STRIP, RETAINING - TRIM COVEI	1,1		
11	32	37446	TUBE, WATER INLET (SHORT SH	1,1		
11	32	37438	TUBE, WATER INLET (LONG SH	1,1		
12	23	29591	SLEEVE, RUBBER - WATER INLE	1		
13		38469	TUBE, EXHAUST (SHORT SHAFT	1,1		
13		38470	TUBE, EXHAUST (LONG SHAFT)	1,1		
14	10	38601	SCREW, EXHAUST TUBE TO EXH	3	USE 3 SCREWS AND 3 NUTS TH	
14	10	38601	SCREW, EXHAUST TUBE TO EXH	2	USE 3 SCREWS AND 3 NUTS TH	
15	11	46886	NUT, EXHAUST TUBE SCREW	3	USE 3 SCREWS AND 3 NUTS TH	
15	11	46886	NUT, EXHAUST TUBE SCREW	2	USE 3 SCREWS AND 3 NUTS TH	
16	11	23161	NUT, POWERHEAD STUDS	6,6		
17	11	20509	NUT, POWERHEAD STUDS	2,2		
18	12	20086	WASHER, POWERHEAD STUDS	2,2		
19	27	38471	GASKET, EXHAUST EXTENSION	1,1		4
20		47560	GUIDE, PUSH ROD - REVERSE L	1,1		
20		52887	GUIDE, PUSH ROD - REVERSE L	1,1		
21		47591	ROD, PUSH - REVERSE LOCK (SH	1,1		
21		47558	ROD, PUSH - REVERSE LOCK (LC	1,1		
22	11	47661	NUT, JAM - PUSH ROD	1,1		
23		47559	YOKE, PUSH ROD	1,1		
24	17	39023	PIN, PUSH ROD TO REVERSE LC	1,1		
25	18	25191	COTTER PIN, PUSH ROD PIN	1,1		
26		37398	MOUNT, RUBBER - UPPER	2,2		
26		38820	MOUNT, RUBBER - UPPER (HEA	OPT.,0		
27		31260	COVER, UPPER MOUNT - OUTSII	2		
28		27712	COVER, UPPER MOUNT - INSIDE	2		