



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
		1614	1440A 3	GEAR HOUSING ASSEMBLY, COI	1,1,1,1	
		1614	1440A 2	GEAR HOUSING ASSEMBLY, COI1,1	
1		1614	1440A 1	GEAR HOUSING ASSEMBLY	1,1,1,1	
2	31	28157	BEARING, ROLLER - PROP A	2,2,2,2		
3	16	26809	STUD, GEAR HOUSING TO D	1,1,1,1		
4	10	21153	SCREW, PINION GEAR TO DRP	1,1,1,1		
5	14	20806	TAB WASHER, PINION GEAR S	1,1,1,1		
6	43	26312	GEAR, PINION	1,1,1,1		
6	43	27997	GEAR, PINION1,1		
7		26315A 1	PILOT ASSEMBLY, GEAR HOUS	1,1,1,1		
8	25	26317	"O" RING, PILOT ASSEMBLY	1,1,1,1		
9	25	27018	"O" RING, PILOT ASSEMBLY	1,1,1,1		
10	15	21886A 1	SHIM, BALL BEARING TO PILO	OPT,OI		
11	30	21776	BEARING, BALL - PILOT AND D	1,1,1,1		
12	45	26694A 1	DRIVE SHAFT ASSEMBLY (LOW	1,1,1,1		
13	23	26660	BUSHING, DRIVE SHAFT	1,1,1,1		
14	17	20201	DOWEL, HOLLOW - DRIVE SHA	1,1,1,1		
15	35	26314	SCREEN, WATER INLET - GEAR	1,1,1,1		
16	44	26308	SHAFT, PROPELLER	1,1,1,1		
16	44	28275	SHAFT, PROPELLER1,1		
17	43	26311	GEAR, PROPELLER	1,1,1,1		
17	43	27998	GEAR, PROPELLER1,1		
18	17	21156	PIN, PROPELLER GEAR TO SH.	1,1,1,1		
19	15	26320A 1	SHIM, "L" WASHER TO GEAR F	OPT,OI		
20	12	26309	"L" WASHER, BALL BEARING	1,1,1,1		
21	30	20464	BEARING, BALL - PROPELLER	1,1,1,1		
22	15	21158A 1	SHIM, BALL BEARING TO SNAF	OPT,OI		
23	53	21159	RING, SNAP - BALL BEARING T	1,1,1,1		
24	25	20311	"O" RING, BEARING CARRIER	1,1,1,1		
25		28460A 1	BEARING CARRIER ASSEMBLY	1,1,1,1		
26	31	28157	BEARING, ROLLER - BEARING	1,1,1,1		
27	26	27163	OIL SEAL, BEARING CARRIER	1,1,1,1		
28	26	26805	OIL SEAL, BEARING CARRIER	1,1,1,1		
29		26310	COVER, GEAR HOUSING	1,1,1,1		
30	10	28634	SCREW, GREASE FILLER HOLE	1,1,1,1		
31	12	20260	WASHER, GREASE FILLER HOI	1,1,1,1		
32	23	27023	COLLAR, PROPELLER SHAFT	1,1,1,1		
33	48	26608A 1	PROPELLER ASSEMBLY	1,1,1		
33	48	28880A 1	PROPELLER ASSEMBLY1,1		
33	48	28036A 1	PROPELLER ASSEMBLY1,1		
34	22	27024	SPACER, PROPELLER (SPRIND	1,1,1,1		