



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	415	2295	CRANKSHAFT	1,1,1,1.		
2	30	20464	BEARING, BALL - CRANKCASE (L	1,1,1,1.		
3	26	20465	OIL SEAL, CRANKCASE (LOWER)	2,2,2,2.		
4	23	29736	SLEEVE, PROTECTOR - CRANKS	1,1,1,1.		
5	25	29845	"O" RING, PROTECTOR SLEEVE	1,1,1,1.		
6	522	1510A 1	CENTER MAIN BEARING ASSEMI	1,1,1,...		
6	527	1619A 1	CENTER MAIN BEARING ASSEMI	1,1,1,...		
6	527	1947A 2	CENTER MAIN BEARING ASSEMI	1,1,1,...		
7	17	20032	DOWEL PIN, CENTER MAIN BE	2,2,2,...		
7	17	20032	DOWEL PIN, CENTER MAIN BE	1,10,10		
8	10	26184	SCREW, CENTER MAIN BEARII	2,2,2,...		
8	10	26184	SCREW, CENTER MAIN BEARII	1,10,10		
8	10	25313	SCREW, CENTER MAIN BEARII	2,2,2,...		
8	10	22486	SCREW, CENTER MAIN BEARII	1,1,1,...		
9	11	24652	NUT, CENTER MAIN BEARING	2,2,2,2.		
9	11	29469	NUT, CENTER MAIN BEARING	1,1,1,...		
9	34	21293	REED, CENTER MAIN BEARING	4,4,4,...		
10	34	20888A 1	REED SET, CENTER MAIN BEAR	1,1,1,1.		
10	34	30303A 1	REED SET, CENTER MAIN BEAR	1,1,1,1.		
10	34	25454	REED STOP, MAIN BEARING REI	4,4,4,...		
11	34	20053	REED STOP, MAIN BEARING REI	1,4,4,4.		
11	34	32038	REED STOP, MAIN BEARING REI	1,4,4,4.		
12	10	20100	SCREW, REED STOP MOUNTING	4,4,4,...		
12	10	29465	SCREW, REED STOP MOUNTING	1,4,4,4.		
13	11	24656	NUT, REED STOP MOUNTING SC	4,4,4,...		
13	11	29469	NUT, REED STOP MOUNTING SC	1,4,4,4.		
14	17	20032	DOWEL PIN, MAIN BEARING TO	1,1,1,1.		
15	28	20094	KEY, FLYWHEEL	1,1,1,1.		