



12020

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1647	9148A47	GEAR HOUSING (BASIC) (BLACK)	1		
1	1647	9148A48	GEAR HOUSING (BASIC) (GRAY)	1		
47		78956	SHIFT CAM	1		
48		89594A	FOLLOWER	1		
49		79911	ROD	1		
50	24	79910	SPRING	2		
51	12	78910	WASHER	AR		
52	17	78906	PIN	1		
53		14469	BEARING CUP	1		
54	30	88957A	BEARING	1		
55		N.S.S.	Not Sold Seperate, Reverse Gear	1		
56	31	15844	BEARING ASSEMBLY, Roller	1		
57	17	78909	PIN, Detent	2		
58	52	823174	CLUTCH	1		
59	17	78905	PIN, Cross	1		
60	24	78962	SPRING	2		
61	43	18572A	FORWARD GEAR (135/150)	1		
61	43	18475A	FORWARD GEAR (175/200)	1		
62	23	17615	SPACER SHIM, (.125 Inch)	AR		
62	23	17615	SPACER SHIM, (.127 Inch)	AR		
62	23	17615	SPACER SHIM, (.129 Inch)	AR		
62	23	17615	SPACER SHIM, (.131 Inch)	AR		
62	23	17615	SPACER SHIM, (.133 Inch)	AR		
62	23	17615	SPACER SHIM, (.135 Inch)	AR		
62	23	17615	SPACER SHIM, (.137 Inch)	AR		
62	23	17615	SPACER SHIM, (.139 Inch)	AR		
62	23	17615	SPACER SHIM, (.141 Inch)	AR		
62	23	17615	SPACER SHIM, (.143 Inch)	AR		
62	23	17615	SPACER SHIM, (.145 Inch)	AR		
62	23	17615	SPACER SHIM, (.147 Inch)	AR		
62	23	17615	SPACER SHIM, (.149 Inch)	AR		
63	31	15841	ROLLER BEARING	1		
64	12	17616	THRUST RING	1		
65	25	31534	O-RING	1		2,15
66		18447A	BEARING ADAPTOR	1		
67	31	15843	ROLLER BEARING	1		
68	12	18448	THRUST WASHER	2		
69	31	15842	BEARING, Thrust	2		
70	44	18446	PROPELLER SHAFT	1		
71		818896A	BEARING CARRIER	1		
72	21	20955	BEARING, Needle	1		