



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20696	NUT, FLYWHEEL	1,1		
2	12	36245	WASHER, FLYWHEEL NUT	1,1	SERIAL 00000000-01680572	
2	12	36282	WASHER, FLYWHEEL NUT	,1,1	SERIAL 01680573-09999999	
3	25	36284	"O" RING, FLYWHEEL HUB	,1,1	SERIAL 01680573-09999999	
4	28	20094	KEY, FLYWHEEL DRIVE	2,2		
5	19	29900	PLUG, PLASTIC, FLYWHEEL SCR	3,3		
6	219	2246A 2	FLYWHEEL ASSEMBLY, COMPLE	1,1,1		
7	23	34367	COLLAR, FLYWHEEL DUST SH	1,1,1		
8	13	22027	WASHER, WAVE-MAGNETO CAM	1,1,1		
9	398	2574A 1	STATOR PLATE ASSEMBLY, CON	1,1,1	FOR ADDITIONAL PARTS OF A-	
10		35599A 1	SHIELD ASSEMBLY, MAGNETO	,1,1		
11	10	34695	SCREW SHIELD TO MAGNET	2,2		
12	13	26996	LOCKWASHER, SHIELD SCRE	2,2		
13		33904	RING, HOLD DOWN-STATOR PL	1,1,1		
14	10	35400	SCREW, HLD DOWN RING TO	4,4,4		
15	398	2230	CAM, BREAKER	1,1,1		
16	15	33910	SHIM, STATOR PLATE TO UPPE	1,1,1		
17		34363A 1	THROTTLE CAM BRACKET ASSE	1,1,1		
18	10	20738	SCREW, CAM BRACKET TO STA	2,2,2		
19	13	26991	LOCKWASHER, CAM BRACKET F	2,2,2		
20	54	34449	CLIP, THROTTLE CAM BRACKET	1,1,1		
21		34360	CAM, THROTTLE	1,1	SERIAL 00000000-01680572	
21		36000	CAM, THROTTLE	,1,1	SERIAL 01680573-09999999	
22	10	28707	SCREW, THROTTLE CAM TO CAI	2,2,2		
23	10	34297	SCREW, CONTROL LEVER TO CA	1,,	USE WITH A-34248 LEVER	
24	23	34299	BUSHING, CONTROL LEVER SCF	1,,	USE WITH A-34248 LEVER	
25	12	20192	WASHER, CONTROL LEVER SCF	1,,	USE WITH A-34248 LEVER	
26	11	26768	NUT, CONTROL LEVER SCREW	1,,	USE WITH A-34248 LEVER	
27	10	34696	SCREW, CONTROL LEVER TO CA	1,1,1	USE WITH A-34387A1 LEVER	
28	13	29720	WASHER, WAVE-CONTROL LEV	1,1,1	USE WITH A-34387A1 LEVER	
29	12	34392	WASHER, CONTROL LEVER SCF	2,2,2	USE WITH A-34387A1 LEVER	
30	11	28656	NUT, CONTROL LEVER SCREW	1,1,1	USE WITH A-34387A1 LEVER	