



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		31502A 1	FUEL PUMP ASSEMBLY	1,1,...		
2	21	22974A 2	CHECK VALVE ASSEMBLY	2,2,...		
1		33852A 1	FUEL PUMP ASSEMBLY	,,1,1,1		
2	21	22974A 2	CHECK VALVE ASSEMBLY	,,2,2,2		
3	10	24233	SCREW, FUEL PUMP TO CYLIND	4,4,4,4,		
4	12	26014	WASHER, PUMP TO CYLINDER E	4,4,4,4,		
5	32	30850	FUEL LINE, PUMP TO CARBURE	1,....		
5	32	32230	FUEL LINE, PUMP TO CARBURE	,1,1,1,1		
6	22	23468	ADAPTOR, FUEL LINE-CARBURE	1,....		
7		31503	DIAPHRAGM, FUEL PUMP TO GA	1,1,1,1,		
8	27	30651	GASKET, FUEL PUMP TO SPACE	1,1,1,1,		
9		31510	SPACER, FUEL PUMP TO CYLINC	1,1,1,1,		
10	27	31509	GSKET, SPACER TO CYLINDER E	1,1,1,1,		
11	32	30851	FUEL LINE, PUMP TO ADAPTOR	1,....		
12		30748	ADAPTOR, CHECK UNIT (FUEL LI	1,....		
13	10	29283	SCREW, ADAPTOR TO BOTTOM	2,....		
11	32	32617	FUEL LINE, FUEL PUMP TO ADA	,1,1,1,1		
12A		32454	ADAPTOR, CHECK UNIT (FUEL LI	,1,1,1,1		
13A	10	32455	SCREW, ADAPTOR TO BOTTOM	2,2,2,2		
14	24	28357	SPRING, ADAPTOR TO BOTTOM	2,2,2,2		
15	11	20110	NUT, ADAPTOR TO BOTTOM CO	2,2,2,2		