



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1558	4030A 1	DRIVE SHAFT HOUSING ASSEMBLY	1	
1	1558	4031A 1	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	56299	STUD, DRIVE SHAFT HOUSING	1	
3	11	34863	NUT, DRIVE SHAFT HOUSING ST	1	
4	11	35814	NUT, GEAR HOUSING TO DRIVE	1	
5		39025	COVER, TRIM - DRIVE SHAFT HC	1	
6	10	20512	SCREW, TRIM COVER TO BOTTOM	3	
7	32	39061	TUBE, WATER OUTLET (SHORT)	1	
7	32	39062	TUBE, WATER OUTLET (LONG S)	1	
8	10	28634	SCREW, FLUSH - DRIVE SHAFT	1	
9	12	20260	WASHER, SEALING - FLUSH SCF	1	
10	27	39050	GASKET, ADAPTOR PLATE TO D	1	4
11	11	46887	NUT, POWERHEAD TO DRIVE SH	4	
11	11	24652	NUT, POWERHEAD TO DRIVE SH	2	
12		47259A 1	BLOCK ASSEMBLY, DRIVE SHAFT	2	
13	10	47225	SCREW, BLOCK ASSEMBLY TO	2	
14	1559	2644	SADDLE	1	
15		32021	BUMPER, LOWER THRUST - SAI	1	
16		30646A 2	MOUNT ASSEMBLY, UPPER AND	4	FOR LONG-SHAFT ENGINES, RE
17	53	26406	RING, RETAINING - UPPER AND	4	
18		53041	COVER, LOWER MOUNT	2	
19		45796	COVER, UPPER MOUNT	2	
20	10	30675	SCREW, UPPER AND LOWER MOUNT	2	
20	10	45817	SCREW, LOWER MOUNT COVER	2	