



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1630	2643A32	GEAR HOUSING ASSEMBLY, COV	1	SERIAL #2798057-02938830	
-	1630	2643A33	GEAR HOUSING ASSEMBLY, COV	1	SERIAL #2798057-02938830	
-	1630	4407A 4	GEAR HOUSING ASSEMBLY, COV	1	SERIAL #3002814-09999999	
-	1630	4407A 5	GEAR HOUSING ASSEMBLY, COV	1	SERIAL #3002814-09999999	
1	1630	2643A 9	GEAR HOUSING ASSEMBLY	1	SEE PAGE 22 FOR PARTS BREAK	
1	1630	4407A 1	GEAR HOUSING ASSEMBLY	1	SERIAL #3002814-09999999	
46		30599	CAM, SHIFT	1	SERIAL #2798057-02938830	
46		58981	CAM SHIFT	1	SERIAL #3002814-09999999	
47		31334	FOLLOWER, SHIFT CAM	1		
48	24	31333	SPRING, COMPRESSION - CAM	1		
49	15	30522A 1	SHIM, FORWARD GEAR BALL BEAR			
50	30	21889	BEARING, BALL - FORWARD GEAR			
51	43	48577	FORWARD GEAR ASSEMBLY	1		
52	31	22458	BEARING, ROLLER - FORWARD	1		
53	52	47581	RATCHET, SLIDING CLUTCH	1		
54	53	32449	RING, RETAINING - CROSS PIN	1		
55	17	30535	PIN, CROSS - RATCHET TO PR	1		
56	44	47851	SHAFT, PROPELLER	1		
57	43	48578	REVERSE GEAR ASSEMBLY	1		
58	12	30531	WASHER, THRUST - REVERSE	1		
59	30	21889	BEARING, BALL - REVERSE GEAR	1		
60	15	30532A 1	SHIM, THRUST WASHER TO GEAR			
61	25	30529	"O" RING, BEARING CARRIER	1		4
62		30541A 1	BEARING CARRIER ASSEMBLY	1		
63	31	22458	BEARING, ROLLER - BEARING	1		
64	26	30530	OIL SEAL, BEARING CARRIER	1		
65	12	30528	WASHER, GEAR HOUSING COVER	1		
66		30537	COVER, GEAR HOUSING	1		
67	23	47871A 2	THRUST HUB ASSEMBLY, PROPELLER	1		
68	12	53380	WASHER, CUPPED - THRUST HUB	1		
69	48	47922A 1	PROPELLER ASSEMBLY (2 BLADE)	1	SHIPPED WITH ENGINE FROM I	
69	48	47926A 1	PROPELLER ASSEMBLY (2 BLADE)	OPT.		
69	48	47924A 1	PROPELLER ASSEMBLY (2 BLADE)	OPT.		
69	48	47670A 1	PROPELLER ASSEMBLY (3 BLADE)	OPT.		
70	23	27024	SPACER, SPLINED - PROPELLER	1		
71	12	27025	WASHER, PROPELLER NUT	1	SERIAL #2798057-02938830	
72	11	34933	NUT, PROPELLER	1		