



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2123	3953A 2	TOP COWL ASSEMBLY	1		
2		56377	SEAL, TOP COWL (42 1/8")	1		
3		39080	BLANKET, SOUND ABSORBING	1	SERIAL 00000000-03482752	
4		39071	BLANKET, SOUND ABSORBING	1		
5	25	39086	GROMMET, COWL LATCH - TOP	1		
6	2128	2667A 8	COVER ASSEMBLY, FRONT	1		
7		39039	STRIP, RUBBER - FRONT COVE	1		
8	23	39578	SPACER, FRONT COVER STUD	2		
9	11	20361	NUT, FRONT COVER STUD	2		
10		58114A 2	STARTER HOUSING ASSEMBLY	1	SERIAL 00000000-03482752	
10		63307A 2	STARTER HOUSING ASSEMBLY	1	SERIAL 03482753-09999999	
11		57821	INSERT, ROPE GUIDE - START	1		
12		39043	SEAL, STARTER HOUSING TO	1		
13	10	46962	SCREW, STARTER HOUSING TO	2		
13	10	56354	SCREW, STARTER HOUSING TO	1		
14		55860	PULLEY, STARTER CABLE	1		
15	10	28789	SCREW, CABLE PULLEY TO STA	1		
16	12	22887	WASHER, CABLE PULLEY SCREW	1		
17	23	30977	SPACER, CABLE PULLEY	1		
18		39027	SHIELD, TOP COWL - REAR	1		
19	10	20646	SCREW, REAR SHIELD TO TOP C	2		
20	13	26396	LOCKWASHER, REAR SHIELD S	2		
21		39088A 1	COWL LATCH ASSEMBLY, TOP C	1		
22	24	59174	SPRING, COMPRESSION - COW	2		
23	17	39095	PIN, ROLL - SPRING TO COWL	2		
24	10	34439	SCREW, COWL LATCH TO TOP C	3		
25	14	20165	TAB WASHER, SHEAVE SHAFT	1		
26	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
27		20155	RETAINER, STARTER SPRING	1		
28	24	29340A 1	SPRING, STARTER REWIND	1		
29	23	28912	BUSHING, STARTER SPRING GL	1		
30	50	61576A 1	STARTER SHEAVE ASSEMBLY	1		
31	17	22896	PIN, RETAINER - STARTER CAI	1		
32	13	36206	WASHER, WAVE - STARTER PA	3		
33		30596	PAWL, STARTER	3		
34	23	28919	BUSHING, NYLON - SHEAVE SHA	1		
35	23	61005	SPACER, SHEAVE SHAFT	1		
36		26179	RETAINER, SHEAVE SHAFT TO	1		
37	12	35559	WASHER, SHEAVE SHAFT RETA	1		
38	13	20160	WASHER, WAVE - RETAINER TE	1		
39		20595	PLATE, RETAINER, STARTER R	1		