



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	4556	5945A	DRIVE SHAFT HOUSING ASSEMBLY	1	
1	1558	5946A	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	66373	STUD, DRIVE SHAFT HOUSING	1	(2 5/16")
3	11	34863	NUT, DRIVE SHAFT HOUSING ST	1	
4	11	35814	NUT, GEAR HOUSING TO DRIVE	1	5/16 - 24)
5		72471	COVER, TRIM - DRIVE SHAFT HC	1	
6	10	64652	SCREW, TRIM COVER TO BOTTC	4	
7	32	34395A	HOSE, TELL TALE (9 1/2")	1	
8	32	39061	TUBE, WATER OUTLET	1	SHORT SHAFT
8	32	39062	TUBE, WATER OUTLET	1	LONG SHAFT
9	10	28634	SCREW, FLUSH - DRIVE SHAFT H	1	
10	12	20260	WASHER, SEALING-FLUSH SCRE	1	
11	27	39050	GASKET, ADAPTOR PLATE TO D	1	
12	11	24652	NUT, DRIVE SHAFT HOUSING TC	4	
12	11	24652	NUT, DRIVE SHAFT HOUSING TC	2	
13		55435	BLOCK, DRIVE SHAFT(LONG SHA	1	
15	1559	6678A	SADDLE ASSEMBLY	1	
16		64076	BUMPER, THRUST-SADDLE	1	
17		77754	MOUNT, LOWER AND UPPER	4	5
18	53	26406	RING, RETAINING-UPPER AND L	4	
19		71490	COVER, LOWER MOUNT	2	
20	10	72169	SCREW, LOWER MOUNT COVER	2	
21		71057	LINK ROD, REVERSE LOCK	1	
22	10	65414	SCREW, CAM RETAINER TO DRI	2	(3/4")
23		65216	CAM, REVERSE LOCK	1	
24		72007	RETAINER, REVERSE LOCK CAM	1	