



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A 3	FUEL PUMP ASSEMBLY	1		
2	21	30430A 2	CHECK VALVE ASSEMBLY	1		
3		53245A 1	DIAPHRAGM KIT, FUEL PUM	1		4
4			GASKET, FUEL PUMP TO B,	1		4
5			GASKET, FUEL PUMP	2		4
6		53241	BASE, FUEL PUMP	1		
7		54066	COVER, FUEL PUMP	1		
8	22	54090	ELBOW, FUEL PUMP OUTLET	1		
9	10	32627	SCREW, FUEL PUMP TO BASE	4		
10	12	20128	WASHER, FUEL PUMP SCREW	4		
11	32	56341	FUEL LINE, FUEL PUMP TO CARB	1		
12	32	52742A 1	HOSE, PRESSURE - FUEL PUMP	1		
13	22	53553	ELBOW, CYLINDER LOCK TO PI	1		
14	54	20387	CLAMP, PRESURE HOSE FASTEN	2		
15	32	39485	FUEL LINE, FUEL PUMP TO ADAP	1		
16		32454	ADAPTOR, CHECK UNIT (FUEL LI	1		
17		39052	SEAL, ADAPTOR TO BOTTOM CC	1		
18	10	24233	SCREW, ADAPTOR TO COWL (1	2	SERIAL #2798057-00029388	
18	10	22958	SCREW, ADAPTOR TO COWL (1	2	SERIAL #3002814-09999999	
19	24	28357	SPRING, ADAPTOR SCREW	2		
20	11	20110	NUT, ADAPTOR SCREW	2	SERIAL #2798057-02938830	
21	10	29200	SCREW, FUEL PUMP TO ANCHO	2		