



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1630	4407A 4	GEAR HOUSING ASSEMBLY, CO	1	A-1630-4407A4,A5 AND A-1630-4	
-	1630	4407A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1630-4407A4,A5 AND A-1630-4	
-	1630	4921A 3	GEAR HOUSING ASSEMBLY, CO	1	A-1630-4407A4,A5 AND A-1630-4	
-	1630	4921A 2	GEAR HOUSING ASSEMBLY, CO	1	A-1630-4407A4,A5 AND A-1630-4	
1	1630	4407A 1	GEAR HOUSING ASSEMBLY	1	SEE PAGE 31 FOR BREAKDOWN	
1	1630	4921A 1	GEAR HOUSING ASSEMBLY	1	SEE PAGE 31 FOR BREAKDOWN	
46		58981	CAM, SHIFT	1		
47		31334	FOLLOWER, SHIFT CAM	1		
48	24	31333	SPRING, COMPRESSION - CAM	1		
49	15	30522A 1	SHIM ASSEMBLY, BALL BEARIN	AR		
50	30	21889	BEARING, BALL - FORWARD GI	1		
51	43	48577	FORWARD GEAR ASSEMBLY	1		
52	31	22458	BEARING, ROLLER - FORWARD	1		
53	52	47581	RATCHET, SLIDING CLUTCH	1	SERIAL 00000000-03482752	
53	52	63314	RATCHET, SLIDING CLUTCH	1	SERIAL 03482753-09999999	
54	53	32449	RING, RETAINING - CROSS PIN	1		
55	17	30535	PIN, CROSS - RATCHET TO PR	1		
56	44	47851	SHAFT, PROPELLER	1	SERIAL 00000000-03482752	
56	44	63312	SHAFT, PROPELLER	1	SERIAL 03482753-09999999	
57	43	48578	REVERSE GEAR ASSEMBLY	1	SERIAL 00000000-03482752	
57	43	63316	REVERSE GEAR ASSEMBLY	1	SERIAL 03482753-09999999	
58	12	30531	WASHER, THRUST - REVERSE	1		
59	30	21889	BEARING, BALL - REVERSE GE	1		
60	15	30532A 1	SHIM ASSEMBLY, THRUST WA	AR		
61	25	30529	"O" RING, BEARING CARRIER	1		2,4
62		30541A 1	BEARING CARRIER ASSEMBLY	1	SERIAL 00000000-03482752	
62		63317A 1	BEARING CARRIER ASSEMBLY	1	SERIAL 03482753-09999999	
63	31	22458	BEARING, ROLLER - BEARIN	1		
64	26	30530	OIL SEAL, BEARING CARRIEF	1		
65	12	30528	WASHER, GEAR HOUSING CO	1		
66		30537	COVER, GEAR HOUSING	1		
67	23	63466	COLLAR, PROPELLER GUIDE	1		
69	48	47670A 1	PROPELLER ASSEMBLY (SHIPPE	1		
69	48	47922A 1	PROPELLER ASSEMBLY	OPT		
70	23	27024	SPACER, SPLINED - PROPELLER	1		
71	11	34933	NUT, PROPELLER	1	SERIAL 00000000-03482752	
71	11	64075	NUT, PROPELLER	1	SERIAL 03482753-09999999	