



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A 3	FUEL PUMP ASSEMBLY	1		
2	21	30430A 2	CHECK VALVE ASSEMBLY	1		
3		53245A 1	DIAPHRAGM KIT, FUEL PUMF	1		4
4			GASKET, FUEL PUMP TO B,	1		4
5			GASKET, FUEL PUMP	2		4
6		53241	BASE, FUEL PUMP	1		
7	10	29200	SCREW, FUEL PUMP TO ANCHO	2		
8		61541	COVER, FUEL PUMP	1		
9	22	61544	ELBOW, PUMP OUTLET	1		
10	10	32627	SCREW, FUEL PUMP TO BASE (1	4		
11	12	20128	WASHER, FUEL PUMP SCREW	4		
12	32	52742A 1	HOSE, PRESSURE - CYLINDER B	1		
13	22	53553	ELBOW, PRESSURE HOSE TO C	1		
14	54	20387	CLAMP, PRESSURE HOSE TO EL	2		
15		22833	ADAPTOR, CHECK UNIT (FUEL LI	1		
16	10	56354	SCREW, ADAPTOR TO BOTTOM	2		
17		23069	STEM, CHECK UNIT ADAPTOR	1		
18	25	20415	"O" RING, ADAPTOR STEM	1		4
19	24	23067	SPRING, ADAPTOR STEM	1		
20		30188	CUP WASHER, ADAPTOR	1		
21	32	61618	FUEL LINE, ADAPTOR TO FUEL F	1		
22	32	64055	FUEL LINE, FUEL PUMP TO CAR	1		

