



BOTTOM COWL AND STOP SWITCH ASSEMBLY

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2159	6681A 2	COWL, BOTTOM	1		
2		79300	MOLDING, BOTTOM COWL	2		
3		74360	PLUG, BOTTOM COWL	1	MANUAL	
4		39778	GROMMET, CHOKE SHAFT- BOT	1		
5		66353	COVER, ACCESS HOLE	1		
6		65479	COVER, ACCESS HOLE	1		
7		39474	ANCHOR, LATCH - BOTTOM COW	1		
8	10	22483	SCREW, LATCH ANCHOR TO BO	2	(1 1/8")	
9	13	26992	LOCKWASHER, LATCH ANCHOR	2		
10	12	36554	WASHER, NYLON- WATER OUTL	1		
11	26	36556	SEAL, RUBBER - WATER OUTLE	1		
12	10	38111	SCREW, BOTTOM COWL TO DRI	1	(3/4")	
13	13	26992	LOCKWASHER, BOTTOM COWL E	1		
14	27	45748	GASKET, POWERHEAD TO ADAP	1		
15		74354	RETAINER, WIRING HARNESS (E	1	ELECTRIC	
16	10	48408	SCREW, RETAINER TO BOTTOM	1	ELECTRIC	
17	24	78810	SPRING, CABLE TO ARM LATCH	1		
18		78809	LATCH, ARM- BOTTOM COWL	1		
19	29	52168	PIN, ARM LOCATING	1		
20		78808	LATCH, BODY- BOTTOM COWL	1		
21	10	32228	SCREW, LATCH TO BOTTOM CO	3		
22	27	39050	GASKET, BOTTOM COWL TO DR	1		
23	87	69508A 1	STOP SWITCH ASSEMBLY	1	MANUAL	
24	13	69845	LOCKWASHER, STOP SWITCH	1	MANUAL	
25	11	69844	NUT, STOP SWITCH -MANUAL	1		