



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2460A19	GEAR HOUSING ASSEMBLY, CO	1,	
-	1623	2460A18	GEAR HOUSING ASSEMBLY, CO	1,	
-	1623	2460A26	GEAR HOUSING ASSEMBLY, CO	.1,1	
-	1623	2460A27	GEAR HOUSING ASSEMBLY, CO	.1,1	
1	1623	2460A 4	GEAR HOUSING ASSEMBLY	1,	
1	1623	2460A20	GEAR HOUSING ASSEMBLY	.1,1	
2	16	30661	STUD, GEAR HOUSING TO D	1,	
2	16	45199	STUD, GEAR HOUSING TO DR	.1,1	
3	16	29078	STUD, REAR HOUSING TO DR	2,	
3	16	45198	STUD, GEAR HOUSING TO D	2,2	
4	16	36292	STUD, WATER PUMP BASE A	1,1,1	
5	16	37435	STUD, WATER PUMP BASE A	2,2,2	
6	31	32898	BEARING, ROLLER - DRIVE S	1,1,1	
7	45	38459	DRIVE SHAFT(SHORT SHAFT)	1,1,1	
7	45	38460	DRIVE SHAFT(LONG SHAFT)	1,1,1	
8	43	31419	GEAR, PINION - DRIVE SHAFT	1,1,1	
9	11	30932	NUT, PINION GEAR TO DRIVE	1,1,1	
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR,	
11	30	20464	BEARING, BALL - DRIVE SHAFT	1,1,1	
12	53	30726	RING, RETAINING - BALL BEAR	1,1,1	
10	15	30278A 1	SHIM, WATER PUMP BASE TO	AR,AR,	
13	27	32438	GASKET, WATER PUMP BASE	1,1,1	2,4
14	25	30224	"O" RING, WATER PUMP BASE	1,1,1	2,4
15	46	38931A 1	WATER PUMP BASE ASSEMBL	1,1,1	
16	26	31489	OIL SEAL, WATER PUMP BAS	1,1,1	
17	26	31507	OIL SEAL, WATER PUMP BAS	1,1,1	
18	17	35973	DOWEL PIN, WATER PUMP E	2,2,2	
19	27	32433	GASKET, LOWER - WATER PUMI	1,1,1	2,4
20		32435	PLATE, FACE - WATER PUMP E	1,1,1	
21	27	32434	GASKET, UPPER - FACE PLATE	1,1,1	2,4
22	46	37433A 1	WATER PUMP BODY ASSEMBL	1,1,1	
23		30915	INSERT, WATER PUMP BOD	1,1,1	
24	26	31507	OIL SEAL, WATER PUMP BOU	1,1,1	
25	12	36446	WASHER, NYLON - WATER II	1,	
26	26	36557	SEAL, RUBBER - WATER INLI	1,	
26	26	38970	SEAL, RUBBER - WATER INLI	.1,1	2,4
27	47	30221	IMPELLER - WATER PUMP	1,1,1	
28	17	29967	PIN, IMPELLER DRIVE	1,1,1	
29	10	30720	SCREW, WATER PUMP BODY	1,1,1	
30	13	26392	LOCKWASHER, WATER PUMP	3,3,3	
31	11	28599	NUT, WATER PUMP BODY FAST	2,2,2	