



| Parts List |       |          |                             |     |          |
|------------|-------|----------|-----------------------------|-----|----------|
| Ref        | Class | Part     | Description                 | Qty | Footnote |
| -          | 393   | 1282A17  | DISTRIBUTOR ASSEMBLY, COMF  | 1   |          |
| -          | 393   | 1282A22  | DISTRIBUTOR ASSEMBLY, COMF  | .1  |          |
| 1          | 393   | 1282     | HOUSING, PRIMARY            | 1.1 |          |
| 2          | 22    | 25885A 1 | ELBOW ASSEMBLY, VENT HOSE   | 1.1 |          |
| 3          | 393   | 1504A 5  | BREAKER ASSEMBLY, COMPLE    | 2.2 |          |
| 4          | 16    | 29230    | STUD, PRIMARY LEAD AND T    | 2.2 |          |
| 5          | 11    | 29236    | NUT, PRIMARY LEAD FASTE     | 2.2 |          |
| 6          | 393   | 1586     | GROMMET, PLATIC - BREAK     | 2.2 |          |
| 7          | 53    | 21058    | "E" RING, BREAKER TO PIVO   | 2.2 |          |
| 8          | 393   | 1287A 2  | CAM WICK AND HOLDER ASE     | 2.2 |          |
| 9          | 10    | 20597    | SCREW, BREAKER HOLDER       | 2.2 |          |
| 10         | 393   | 1656     | WIRE, PRIMARY GROUND        | 1.1 |          |
| 11         | 393   | 1283     | CONDENSER                   | 2   |          |
| --         | 23    | 45006    | SPACER                      | .2  |          |
| --         | 393   | 2730     | BRACKET, SPACER MOUNTING    | .2  |          |
| 12         |       | 38700    | SNUBBER, CONDENSER AND      | 1.1 |          |
| 13         | 10    | 29434    | SCREW, CONDENSER AND SP     | 2.2 |          |
| 14         | 30    | 26379    | BEARING, BALL - CAL SHAFT   | 2.2 |          |
| 15         | 17    | 25319    | PIN, ROLL - CAM SHAFT       | 1.1 |          |
| 16         | 393   | 1779A 2  | SHAFT ASSEMBLY - DISTRIBUT  | 1   |          |
| 16         | 332   | 2802A 2  | SHAFT ASSEMBLY - DISTRIBUT  | .1  |          |
| 17         | 25    | 26543    | "O" RING, CAM SHAFT         | 1.1 |          |
| 18         | 23    | 28933    | BUSHING, DISTRIBUTOR CAM    | 1.1 |          |
| 19         | 13    | 26917    | WASHER, WAVE - BALL BEARII  | 2.2 |          |
| 20         | 27    | 26412    | GASKET, HOUSING TO ADAPTI   | 1.1 | 4        |
| 21         | 393   | 1278     | ADAPTOR, HOUSING TO DISTF   | 1.1 |          |
| 22         | 10    | 29180    | SCREW, ADAPTOR TO HOUSIN    | 4.4 |          |
| 23         | 393   | 1280A 1  | ROTOR, DISTRIBUTOR          | 1.1 |          |
| 24         | 27    | 36268    | GASKET, DISTRIBUTOR CAP T   | 1.1 | 4        |
| 25         | 393   | 1927A 5  | DISTRIBUTOR CAP ASSEMBLY    | 1   |          |
| 25         | 393   | 1927A 9  | DISTRIBUTOR CAP ASSEMBLY    | .1  |          |
| 26         | 393   | 1293A 1  | BRUSH AND SPRING ASSEM      | 1.1 |          |
| 27         | 22    | 31521    | ELBOW, VENT HOSE - DISTR    | 1.1 |          |
| 28         | 393   | F1277    | SLIED INLET COVER ASSEMBL   | 1   |          |
| 29         | 393   | 1292A 1  | BRUSH AND SPRING ASSEM      | 1   |          |
| 28         | 393   | 2725     | COVER, SIDE INLET (NOT AS S | .1  |          |
| 30         | 27    | 26447    | GASKET, SIDE INLET TO DISTF | 1.1 | 4        |
| 31         | 10    | 29167    | SCREW, SIDE INLET TO DISTR  | 2   |          |
| 31         | 10    | 45380    | SCREW, SIDE INLET COVER TI  | .2  |          |
| 32         | 54    | 24836    | CLIP, DISTRIBUTOR LEAD WIR  | .1  |          |
| 32         |       | 22789    | "O" WASHER, SIDE INLET COV  | 1   |          |