



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	19	45307	PLUG, FLYWHEEL PULLER THRE	.1		
2	11	22339	NUT< FLYWHEEL	1,1		
3	12	33001	WASHER, FLYWHEEL NUT	1,1		
4	28	30250	KEY, FLYWHEEL DRIVE	1,1	SERIAL 00000000-02101742	
4	28	45554	KEY, FLYWHEEL DRIVE	.1	SERIAL 02101743-09999999	
5	225	2494A 2	FLYWHEEL ASSEMBLY, COMPLE	1,1		
6	10	32417	SCREW, FLEXIBLE PLATE TO F	8,8,8		
7	10	32417	SCREW, PLATE AND HUB TO F	8,8,8		
8	17	26618	PIN, DOWL - PULLEY TO FLYW	1,1		
9		29788	FLANGE, FLYWHEEL PULLEY	1,1		
10		30306	PULLEY, FLYWHEEL	1,1		
11		29787	HUB, FLYWHEEL PULLEY	1,1		
12	398	2188	STATDR, ALTERNATOR	1,1		
13		30050	TERMINAL, STATOR LEAD WIF	2,2		
14	10	32614	SCREW, STARTER TO UPPER EI	4,4,4		
15	54	22740	CLIP, STATOR LEAD FASTENING	4,		
15	54	22875	CLIP, STATOR LEAD FASTENING	2,		
15	54	26550	CLIP, STATOR/WIRING HARNE	.5,		
15	54	26550	STATOR/WIRING HARNE	.4		
16	10	30009	SCREW, STATOR LEAD CLIP FAS	2,		
16	10	30009	SCREW, STATOR LEAD CLIP FAS	.3,		
16	10	30009	SCREW, STATOR LEAD CLIP FAS	.1		
16	10	31206	SCREW, STATOR LEAD CLIP FAS	2,2,		
16	10	31206	SCREW, STATOR LEAD CLIP FAS	.3		
17		22789	"D" WASHER, CLIP FASTENING :	4,,4		
17		22789	"D" WASHER, CLIP FASTENING :	.5,		