



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		46463	WIRING HARNESS, INTERNAL	1		
2		30050	TERMINAL, HARNESS AND ME	AR		
3	54	26538	CLIP, WIRING HARNESS TO FRO	1		
4		22789	"D" WASHER, WIRING HARNESS	1		
5	10	30009	SCREW, WIRING HARNESS TO F	1		
3	54	23567	CLIP, WIRING HARNESS TO FRO	2		
4	10	31206	"D" WASHER, WIRING HARNESS	2		
5		22789	SCREW, WIRING HARNESS CLIF	2		
6		26079	PLATE, WIRING HARNESS TO B	1		
7	10	45893	SCREW, HARNESS PLATE FASTI	4		
8	24	28975	SPRING, GRATER - INTERNAL W	1		
9	10	45087	SCREW, GROUND WIRE TO BOT	1	SERIAL 00000000-02208677	
9	10	20776	SCREW, GROUND WIRE TO BOT	1	SERIAL 02208678-09999999	
10	13	25244	LOCKWASHER, GROUND WIRE :	1		
11	13	24669	LOCKWASHER, GROUND WIRE :	1		
12	11	20088	NUT, GROUND WIRE SCREW	2	SERIAL 00000000-02208677	
13	332	2910A	RECTIFIER ASSEMBLY	1		
14	10	22485	SCREW, RECTIFIER TO MOUNTI	2		
15	11	46887	NUT, RECTIFIER MOUNTING SC	2		
16	12	45075	WASHER, RECTIFIER STATOR L	3		
17	11	45076	NUT, FASTENING - RECTIFIER S	3		
18	50	45822A	STARTER MOTOR ASSEMBLY	1		
19		45125	PLATE, SPACER - STARTER MOT	1		
20	10	22698	SCREW, STARTER MOTOR TO C	2		
21	13	26993	LOCKWASHER, STARTER MOTO	2		
22		38747	BRACKET, SUPPORT - STARTER	1		
23	13	24669	LOCKWASHER, THRU BOLT	2		
24	11	20088	NUT, THRU BOLT - BRACKET TO	2		
25		25596	CABLE, WIRE - STARTER MOTO	1		
26	10	29197	SCREW, HARNESS GROUND LE	1		
27		32107	CABLE, WIRE - STARTER MOTO	1		
28		32082	SOLENOID, STARTER	1		
29		46466	GROUND STRAP ASSEMBLY, ST	1		
30	13	26993	LOCKWASHER, SOLENOID TERM	2		
31	11	20083	NUT, SOLENOID TERMINAL (5/1)	2		
32	13	26996	LOCKWASHER, SOLENOID TERM	2		
33	11	20645	NUT, SOLENOID TERMINAL (#10	2		
34	10	29282	SCREW, SOLENOID TO STARTE	2		
35	13	26992	LOCKWASHER, STARTER MOTO	1		
36	11	20890	NUT, STARTER MOTOR TERMIN	1		
37	222	2985A	SWITCH BOX ASSEMBLY	1		