



WIRING HARNESS AND IGNITION COIL

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	339	7370A13	IGNITION COIL	6		
2		43542	COVER, IGNITION COIL	2		
3	10	88856	SCREW, IGNITION COIL COVER	12		
4	11	45076	NUT, IGNITION COIL TERMINAL	12		
5	84	88807A12	CABLE ASSEMBLY, IGNITION CO	3		
5	84	88807A13	CABLE ASSEMBLY, IGNITION CO	3		
6	84	813715A10	CABLE, HIGH TENSION	1		
7	85	63709A 1	PROTECTOR, SPARK PLUG EN	6		
8	33	97180	SPARK PLUG (NGK-BUHW)	6		
8	33	14103550	SPARK PLUG (NGK-BUZHWA) (CA	6		
9	84	85537A 2	HARNESS, COIL TO SWITCH BO	1		
9	84	85537A 1	HARNESS, COIL TO SWITCH BO	1		
11	84	96188A 4	WIRING HARNESS	1		
12	88	79091	FUSE	1		
13	84	95084A 2	WIRE, FUSE HOLDER	1		
14	54	88608	CLAMP, WIRING HARNESS	1		
15	10	28636	SCREW, WIRING HARNESS CLAI	2		
16	13	26996	LOCKWASHER, WIRING HARNE	2		
17		89047T	BRACKET, WIRING HARNESS	1		
18	10	24637	SCREW, WIRING HARNESS BRA	2		
19	12	38833	WASHER, BRACKET SCREW	2		
20	11	20110	NUT, BRACKET SCREW	2		
21		88751	CLAMP, WIRING HARNESS	1		
22	10	28636	SCREW, WIRING HARNESS CLAI	1		
23	12	20533	WASHER, CLAMP SCREW	1		
24	84	88439A 3	BATTERY CABLE (POSITIVE)	1		
24	84	88439A 4	BATTERY CABLE (NEGATIVE)	1		
25	12	30164	WASHER, COIL COVER SCREW	12		
26		13473 1	FUSE HOLDER	1		