



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		76509A 3	TRIM CYLINDER ASSY	2	(IDENTIFY BY CASTING #78439)	
1		92194A 14	TRIM CYLINDER ASSY	2	(IDENTIFY BY NO CASTING #)	
1	22	74036	GREASE FITTING, TRIM CYLIND	2		
3	10	45265	SCREW, BLEED	4		
4	25	45016	"O"RING, BLEED SCREW	4		
5	10	45264	SCREW, TRIM CYLINDER (1-1/2"	2	WITH TAPPED HOLE	
5	10	92050	SCREW, TRIM CYLINDER (1-1/2"	2	WITHOUT TAPPED HOLE	
6	12	28421	WASHER, TRIM CYLINDER BOLT	4		
7	23	45280	SPACER, TRIM CYLINDER - LOW	2		
8	23	94907A 1	BUSHING, RUBBER - TRIM CYLIN	2		
9		89108A 3	BRACKET, TRIM CYLINDER (POF	1		
10	26	70608	OIL SEAL, PORT BRACKET	1		
11		89290	PLUNGER, LIMIT SWITCH ACTU	1		
12	24	95881	SPRING, TENSION - LIMIT SWITC	1		
13	16	45282	STUD, MOUNTING BRACKET	1		
14	13	26993	LOCKWASHER, MOUNTING BRA	2		
15	11	28770	NUT, MOUNTING BRACKET STU	2		
16	10	45263	SCREW, MOUNTING BRACKET (	2		
17	10	68298	BOLT, MOUNTING BRACKET TO	6		
17	10	89673	BOLT, MOUNTING BRACKET TO	2		
18	12	68410	WASHER, MOUNTING BRACKET	6		
19	11	99405	NUT, MOUNTING BRACKET BOL	8		
20		89111	BRACKET, TRIM CYLINDER (STA	1		
21	10	45328	SCREW	2	TRIM CYLINDER TO MOUNTING	
22	12	37807	WASHER	1	TRIM CYLINDER SCREW (STAR	
23	11	20696	NUT, TRIM CYLINDER SCREW	2		
24	24	24390	SPRING, TENSION - ADJUSTING	1		
25	16	21085	STUD, ADJUSTING - CUT-OUT LI	1		
26	11	45812	NUT, JAM - LIMIT SWITCH ADJU	1		
27		45508	CAM, LIMIT SWITCH ADJUSTING	1		
28		86967	PLATE, RETAINING - LIMIT SWIT	1		
29	10	68513	SCREW, RETAINING PLATE AND	1		
30	13	26996	LOCKWASHER	1	RETAINING PLATE AND CAM SC	
31		45326A 2	SWITCH ASSEMBLY, CUT-OUT L	1		
32	23	45354	BUSHING, RUBBER - CUT-OUT	1		
33	10	47255	SCREW, CUT-OUT LIMIT SWITCH	2		
34		89272	COVER, LIMIT SWITCH	1		
35	27	89273	GASKET, LIMIT SWITCH COVER	1		
36	10	34994	SCREW, LIMIT SWITCH COVER	4		
37	12	38833	WASHER, LIMIT SWITCH COVER	4		
38		87774A 1	COVER, INLET, TRANSOM	1		