



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	19	45907	PLUG, FLYWHEEL	1		
2	11	52901	NUT, FLYWHEEL	1		
3	12	68229	WASHER, FLYWHEEL	1		
4	248	5977A28	FLYWHEEL ASSEMBLY	1		
5	10	32417	SCREW, FLYWHEEL PLATE	8		
6	10	68997	SCREW, FLYWHEEL HUB	8		
7	398	5454A 8	STATOR ASSEMBLY	1		
8	10	75840	SCREW, STATOR (7/8")	4		
9		96455A 6	TRIGGER PLATE ASSEMBLY	1		
10	54	61001	CLAMP, TRIGGER HARNESS	3		
11	50	72467	STARTER MOTOR	1		
12		56703	COLLAR, STARTER MOTOR	2		
13	23	56774	SPACER, STARTER MOTOR	AP		3
14		57247	STOP, RUBBER-STARTER MOTC	2		
15	84	93388A 1	WIRE, PLATE TO STARTER MOT	1		
16	10	69035	SCREW, CABLE TO STARTER M(	1		
17	84	93389A 6	WIRE, SOLENOID TO STARTER I	1		
18	13	26992	LOCKWASHER, STARTER MOTO	1		
19	11	64015	NUT, STARTER MOTOR TERMIN	1		