



| Parts List |       |          |                              |     |                            |          |
|------------|-------|----------|------------------------------|-----|----------------------------|----------|
| Ref        | Class | Part     | Description                  | Qty | Comment                    | Footnote |
| 1          | 2115  | 6462     | COWL, BOTTOM OVERSIZED       | 1   |                            |          |
| 2          |       | 52862A 2 | DRIP TRAY ASSEMBLY, BOTTOM   | 1   |                            |          |
| 3          |       | 37940    | PAD, SOUND - DRIP TRAY       | 1   |                            |          |
| 4          | 10    | 48408    | SCREW, DRIP TRAY TO BOTTOM   | 4   |                            |          |
| 5          | 32    | 34395A 1 | HOSE, DRIP TRAY TO BOTTOM (  | 1   |                            |          |
| 6          |       | 39616    | BOOT, CONTROL CABLES - BOT   | 1   |                            |          |
| 7          |       | 76369    | SPACER, BOTTOM COWL (COWL    | 1   |                            |          |
| 8          | 10    | 48591    | SCREW, SPACER TO BOTTOM C    | 2   |                            |          |
| 9          |       | 37637    | BOOT, FUEL CONNECTOR - BOT   | 1   |                            |          |
| 10         |       | 37445    | SUPPORT, WIRING HARNESS - E  | 1   |                            |          |
| 11         | 10    | 69029    | SCREW, SUPPORT TO BOTTOM     | 2   |                            |          |
| 11A        | 11    | 36069    | NUT, SUPPORT SCREW           | 2   |                            |          |
| 13         | 32    | 34395A 1 | HOSE                         | 1   | TELL TALE - EXHAUST COVER  |          |
| 14         |       | 52889    | NOZZLE, TELL TALE HOSE TO B  | 1   |                            |          |
| 15         | 10    | 48408    | SCREW                        | 1   | TELL TALE NOZZLE TO BOTTOI |          |
| 16         | 22    | 78279    | ELBOW, TELL TALE HOSE TO CY  | 1   |                            |          |
| 17         |       | 60304A54 | SHIFT SHAFT ASSEMBLY, UPPER  | 1   |                            |          |
| 18         | 23    | 26600    | BUSHING, SHIFT SHAFT         | 1   |                            |          |
| 20         |       | 48047A 1 | LINK ROD ASSEMBLY            | 1   |                            |          |
| 21         | 12    | 35462    | WASHER, LINK ROD             | 2   |                            |          |
| 22         | 11    | 20664    | NUT, LINK ROD                | 2   |                            |          |
| 23         | 13    | 29720    | WASHER, WAVE - LINK ROD      | 1   |                            |          |
| 24         |       | 52732    | BRACKET, ANCHOR - CONTROL    | 1   |                            |          |
| 25         |       | 39519    | CAP, BARREL RETAINER - ANCH  | 1   |                            |          |
| 26         |       | 39618    | LEVER, NYLON - SHIFT CABLE L | 1   |                            |          |
| 27         | 17    | 47175    | PIN, LOCKING LEVER AND COVE  | 3   |                            |          |
| 28         |       | 39667    | COVER, NYLON - SHIFT CABLE   | 1   |                            |          |
| 29         |       | 65799    | LINK, LOCKING LEVER TO COVE  | 1   |                            |          |
| 30         | 10    | 24234    | SCREW                        | 3   | ANCHOR BRACKET TO CYLINDE  |          |
| 31         | 24    | 20099    | SPRING, LINK ROD TO GUIDE BL | 1   |                            |          |
| 32         |       | 37896    | GUIDE BLOCK, LINK ROD        | 1   |                            |          |
| 33         |       | 52100    | WEAR PLATE, LINK ROD         | 1   |                            |          |
| 34         |       | 38279    | LATCH                        | 1   | CONTROL CABLE FASTENING -  |          |