



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		79479	PLATE, ELECTRICAL MOUNTING	1		
2	10	86885	SCREW, PLATE TO CYLINDER BI	4		
2	10	28636	SCREW, PLATE TO CYLINDER BI	2		
2	10	28667	SCREW, PLATE TO CYLINDER BI	3		
3	12	38753	WASHER, PLATE SCREW	7		
4	87	33386A 2	SWITCH ASSEMBLY, MERCURY	1		
5	10	25764	SCREW, MERCURY SWITCH TO	1		
6	11	45076	NUT, WIRE TO MERCURY SWIT	1		
7		62351A 1	RECTIFIER ASSEMBLY	1		
8	10	25764	SCREW, RECITIFIER TO IGNITIO	2		
9	11	45076	NUT, RECTIFIER TERMINALS	3		
10	89	76545	SOLENOID, STARTER	1		
11	10	38601	SCREW, STARTER TO SOLENOID	2		
12	13	26992	LOCKWASHER, STARTER SOLE	2		
13	13	26996	LOCKWASHER, SOLENOID TERM	2		
14	11	68219	NUT, SOLENOID TERMINALS (10	2		
15	13	26993	LOCKWASHER, SOLENOID TERM	2		
16	11	68292	NUT, SOLENOID TERMINALS (5/	2		
17	84	85532	WIRING HARNESS, INTERNAL	1		
18	54	76368	CLAMP, WIRING HARNESS TO B	1		
19	10	69020	SCREW	2	WIRING HARNESS CLAMP TO B	
20	13	26996	LOCKWASHER, WIRING HARNE	2		
21	12	30164	WASHER, WIRING HARNESS CL	2		
22	24	28975	SPRING, GARTER - INTERNAL W	1		
23	10	69052	SCREW, GROUND WIRE TO BOT	1		
24	13	26992	LOCKWASHER, GROUND WIRE	1		
25	332	5524A 1	SWITCH BOX ASSEMBLY	2		
26	10	26251	SCREW, SWITCH BOX TO IGNITI	4		
27	84	62310A 3	CABLE ASSY	1	SWITCH BOX TO SWITCH BOX I	
28	11	45076	NUT, SWITCH BOX TERMINAL	20		
29	338	4995A 2	COIL ASSEMBLY, IGNITION	6		
30		73218	COVER, IGNITION COIL	2		
31	10	69046	SCREW, IGNITION COIL COVER (12		
32	11	45076	NUT, IGNITION COIL TERMINAL	12		
33	84	60466A 1	CABLE ASSEMBLY, IGNITION CO	6		
34	84	73451A 8	CABLE, HIGH TENSION	6		
35	332	2854	BOOT, HIGH TENSION CABLE	6		
36	85	71006A 1	PROTECTOR, HIGH TENSION C	6		
37	33	68057	SPARK PLUG (CHAMPION #L76-V	6		
38	84	85537A 2	HARNESS ASSEMBLY	1	COIL TO SWITCH BOX (#2, 4 AN	
39	84	85537A 1	HARNESS ASSEMBLY	1	COIL TO SWITCH BOX (#1, 2 AN	