



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89748	PLATE, ELECTRICAL MOUNTING	1		
2	10	86885	SCREW, PLATE TO CYLINDER BI	4		
2	10	28636	SCREW, PLATE TO CYLINDER BI	3		
2	10	45561	SCREW, PLATE TO CYLINDER BI	2		
3	12	29245	WASHER, PLATE SCREW	7		
4	87	33386A	SWITCH ASSEMBLY, MERCURY	1		
5	10	25764	SCREW, MERCURY SWITCH TO P	1		
6	11	45076	NUT, WIRE TO MERCURY SWIT	1		
7		62351A	RECTIFIER	1		
8	10	25764	SCREW, RECTIFIER TO IGNITIO	2		
9	11	45076	NUT, RECTIFIER TERMINALS	3		
10	89	68258	STARTER SOLENOID	1	UNITED STATES 6051525 AND I	
11	13	26996	LOCKWASHER, SOLENOID TERM	2	UNITED STATES 6051525 AND I	
12	11	68219	NUT, SOLENOID TERMINALS (10	2	UNITED STATES 6051525 AND I	
13	13	26993	LOCKWASHER, SOLENOID TERM	2	UNITED STATES 6051525 AND I	
14	11	68292	NUT, SOLENOID TERMINALS (5/	2	UNITED STATES 6051525 AND I	
10	89	96054	STARTER SOLENOID	1	UNITED STATES 6051526 AND I	
11	13	26995	LOCKWASHER, SOLENOID TERM	2	UNITED STATES 6051526 AND I	
11	13	26995	LOCKWASHER, SOLENOID TERM	2	UNITED STATES 6051526 AND I	
12	11	26419	NUT, SOLENOID TERMINALS (8:	2	UNITED STATES 6051526 AND I	
13	13	26992	LOCKWASHER, SOLENOID TERM	2	UNITED STATES 6051526 AND I	
14	11	94330	NUT, SOLENOID TERMINALS (1/	2	UNITED STATES 6051526 AND I	
15	10	38601	SCREW, STARTER SOLENOID TI	2		
16	13	26992	LOCKWASHER, STARTER SOLE	2		
17		46265	BOOT, TERMINAL-STARTER SOLE	1		
18		90547	LOCATOR, STARTER SOLENOID	1		
19	332	7778A	SWITCH BOX	2		
20	10	20619	SCREW, SWITCH BOX (1-3/8")	4		
21	23	94304	SPACER, SWITCH BOX SCREW	4		
22	84	60871A10	WIRE ASSEMBLY, SWITCH BOX	2		
23	10	62568	SCREW, WIRE	2		
24	84	62310A	CABLE ASSY	1	SWITCH BOX TO SWITCH BOX I	
25	11	45076	NUT, SWITCH BOX TERMINAL	20		