



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1573	5239A 4	DRIVE SHAFT HOUSING ASSEM	1		
2	16	56295	STUD, DRIVE SHAFT HOUSING	2		
2	16	77168	STUD, DRIVE SHAFT HOUSING	2		
3	19	64649	PLUG, PLASTIC - TRIM TAB SI	1		
5		37417	COVER, TRIM - DRIVE SHAFT HC	1		
6	10	57807	SCREW, TRIM COVER TO BOTTC	4		
6A	25	57806	GROMMET, PLASTIC - TRIM COV	4		
6B		46933A 2	GROUND STRAP ASSEMBLY, TR	2		
6C	10	62568	SCREW, GROUND STRAP ATTAI	2		
7	32	60897	TUBE, WATER INLET (LONG SHA	1		
7	32	77121	TUBE, WATER INLET (EXTRA LO	1		
8		78184	TUBE, EXHAUST	1		
8A		65638	BOOT, RUBER MOUNT	2		
11	11	69254	NUT, POWERHEAD STUDS (3/4-	2		
12	12	25970	WASHER, POWERHEAD STUDS	2		
14		52887	GUIDE, PUSH ROD - REVERSE L	1	(NOT USED WITH FULL POWER	
15		47558	ROD, PUSH - REVERSE LOCK	1	(NOT USED WITH FULL POWER	
16	11	47661	NUT, JAM - PUSH ROD	1	(NOT USED WITH FULL POWER	
17		47559	YOKE, PUSH ROD	1	(NOT USED WITH FULL POWER	
19	18	25191	COTTER PIN, PUSH ROD PIN	1	(NOT USED WITH FULL POWER	
20		75296	MOUNT, RUBBER - UPPER	2		
21	12	47840	WASHER, RUBBER - UPPER MOI	2		
22	12	31263	WASHER, UPPER MOUNT BOLT	2		
23	11	34933	NUT, UPPER MOUNT BOLT	2		
24		75299	MOUNT, RUBBER - LOWER	2		
25	10	49318	SCREW, LOWER MOUNT (5 1/2"	2		
26	12	49339	WASHER, LOWER MOUNT SCRE	2		
27	11	25096	NUT, LOWER MOUNT SCREW	2		
28		25067	BUMPER, RUBBER - LOWER MO	2		
30	11	34933	NUT	2	GEAR HOUSING AND DRIVE SH	
31	12	45176	WASHER	2	GEAR HOUSING TO DRIVE SHA	
32	11	29489	NUT	1	GEAR HOUSING AND DRIVE SH	
33	12	45176	WASHER	1	GEAR HOUSING TO DRIVE SHA	
34		35608	CLAMP, LOWER MOUNT TO DRI	2		
35	24	35522	SPRING, TENSION - LOWER MOI	4		
36	10	29256	SCREW	4	LOWER MOUNT CLAMP TO DRI	
37		35474	COVER, LOWER MOUNT CLAMP	2		
38	11	35521	NUT, LOWER MOUNT CLAMP CC	2		
39	10	29722	SCREW, COVER TO LOWER CLA	2		
--		77120	SPACER, DRIVE SHAFT HOUSINI	1	EXTRA LONG SHAFT	
17		21422	DOWN PIN, SPACER EXTRA LO	2		