



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	393	3736A77	HOUSING ASSEMBLY, DISTRIBU	1			
2		32197	STOP, SPARK ADVANCE - DISTR	1			
3	17	27962	PIN, ANCHOR SPRING - DISTRIB	1			
4	24	27944	SPRING, HORSESHOE - DISTRIB	1			
5	12	53540	WASHER	1	ECONOMIZER COLLAR - DISTR		
6		55804A 1	ECONOMIZER COLLAR ASSEMBLY	1			
7	17	27961	PIN, ECONOMIZER COLLAR - S	1			
8	22	25094	FITTING, GREASE - ECONOMIZ	1			
9		27947	SWIVEL, LINKAGE - ECONOMIZE	1			
12A		67469	ROD, LINK - UPPER	1			
13		27948	SWIVEL	1	UPPER LINK ROD TO THROTTL		
14		78992	LEVER, THROTTLE CONTROL	1			
15	13	3995	WASHER, WAVE - THROTTLE CC	1			
16	12	29245	WASHER, THROTTLE CONTROL	1			
17	11	35888	NUT, UPPER LINK ROD THROTT	1			
18	10	37559	SCREW	1	THROTTLE LEVER TO EXHAUS		
19	12	29395	WASHER, THROTTLE CONTROL	1			
20	23	45818	BUSHING, THROTTLE CONTROL	1			
21	11	20509	NUT, THROTTLE CONTROL LEVI	1			
22		37587	SWIVEL, LOWER	1	THROTTLE CONTROL LEVER T		
23	11	35888	NUT, THROTTLE CABLE TO LOW	1			
24		48692	COLLAR, THROTTLE ACTUATOR	1			
25	10	48675	SCREW, ADJUSTING	1	THROTTLE ACTUATOR COLLAF		
26	11	64015	NUT	1	THROTTLE ACTUATOR COLLAF		
27		52023	CAP	1	NYLON - THROTTLE ACTUATOF		
28		48671	PLATE, THROTTLE ACTUATOR	1			
29	10	37892	SCREW	2	THROTTLE ACTUATOR PLATE		
30	12	30164	WASHER	2	THROTTLE ACTUATOR PLATE I		
31	13	26396	LACKWASHER	2	THROTTLE ACTUATOR PLATE I		
32	23	48674	SPACER, THROTTLE ACTUATOF	2			
33		58454	CAM, THROTTLE ACTUATOR PL	1			
34	12	46246	WASHER, ADAPTOR - DISTRIBU	1			
35		66165A 2	ADAPTOR ASSEMBLY, DISTRIBL	1			
36	22	25094	FITTING, GREASE - DISTRUBUT	1			
37	10	20362	SCREW	3	DISTRIBUTOR HOUSING TO CR		
38	12	20084	WASHER, DISTRIBUTOR HOUSII	3			
40	84	66008A 1	WIRE, GROUND	1	DISTRUBUTOR ADAPTOR TO F		
41		55805	BRACKET, STOP	1			
42	10	28636	SCREW	2	DISTRIBUTOR ADAPTOR TO ST		
43	12	35462	WASHER, STOP BRACKET FAST	2			
44	10	64022	SCREW, STOP BRACKET ADJUS	2			