



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, NYLON - EXHAUST E	1		
3		37918	SEAL, EXHAUST EXTENSION F	1		
4		38032	STRIP	1	RETAINING - EXHAUST EXTENS	
5	10	37571	SCREW	5	SEAL AND RETAINING STRIP TI	
6	17	23784	DOWEL PIN, EXHAUST EXTENS	2		
7	27	69238	GASKET, POWERHEAD TO EXTE	1		6
8	10	66023	SCREW, ADAPTOR PLATE HOUS	2		
10	10	66023	SCREW	7	HOUSING PLATE TO DRIVE SHAF	
11	27	66102	GASKET, PLATE TO DRIVE SHAF	1		6
14	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
15		74257A	3 PLATE ASSEMBLY, DRIVE SHAF	1		
16	26	38970	SEAL, RUBBER - WATER INLET	1		6
17	17	23784	DOWEL PIN, DRIVE SHAFT HO	2		
18	27	62362	GASKET	1	MEGAPHONE TO DRIVE SHAFT	6
19		60437	MEGAPHONE, EXHAUST	1		
20	10	60480	SCREW	3	MEGAPHONE TO DRIVE SHAFT	
21	12	29245	WASHER, MEGAPHONE SCREW	3		
22	12	25970	WASHER, POWERHEAD STUD	6		
23	11	34932	NUT, POWERHEAD STUD	6		
.	27	60476A	75 GASKET SET			