



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	393	3736A77	HOUSING ASSEMBLY, DISTRIBU	1		
2		32197	STOP, SPARK ADVANCE - DISTR	1		
3	17	27962	PIN, ANCHOR SPRING - DISTRIB	1		
4	24	27944	SPRING, HORSESHOE - DISTRIB	1		
5	12	53540	WASHER	1	ECONOMIZER COLLAR - DISTR	
6		55804A 1	ECONOMIZER COLLAR ASSEMBLY	1		
7	17	27961	PIN, ECONOMIZER COLLAR - S	1		
8	22	25094	FITTING, GREASE - ECONOMIZ	1		
9		27947	SWIVEL, LINKAGE - ECONOMIZE	1		
12A		67469	ROD, LINK - UPPER	1		
13		27948	SWIVEL	1	UPPER LINK ROD TO THROTTL	
14		78992	LEVER, THROTTLE CONTROL	1		
15	13	3995	WASHER, WAVE - THROTTLE CC	1		
16	12	29245	WASHER, THROTTLE CONTROL	1		
17	11	35888	NUT, UPPER LINK ROD THROTT	1		
18	10	37559	SCREW	1	THROTTLE LEVER TO EXHAUS	
19	12	29395	WASHER, THROTTLE CONTROL	1		
20	23	45818	BUSHING, THROTTLE CONTROL	1		
21	11	20509	NUT, THROTTLE CONTROL LEVI	1		
22		37587	SWIVEL, LOWER	1	THROTTLE CONTROL LEVER T	
23	11	35888	NUT, THROTTLE CABLE TO LOW	1		
24		48692	COLLAR, THROTTLE ACTUATOR	1		
25	10	48675	SCREW, ADJUSTING	1	THROTTLE ACTUATOR COLLAF	
26	11	64015	NUT	1	THROTTLE ACTUATOR COLLAF	
27		52023	CAP	1	NYLON - THROTTLE ACTUATOF	
28		48671	PLATE, THROTTLE ACTUATOR	1		
29	10	37892	SCREW	2	THROTTLE ACTUATOR PLATE	
30	12	30164	WASHER	2	THROTTLE ACTUATOR PLATE I	
31	13	26396	LACKWASHER	2	THROTTLE ACTUATOR PLATE I	
32	23	48674	SPACER, THROTTLE ACTUATOF	2		
33		58454	CAM, THROTTLE ACTUATOR PL	1		
34	12	46246	WASHER, ADAPTOR - DISTRIBU	1		
35		66165A 2	ADAPTOR ASSEMBLY, DISTRIBL	1		
36	22	25094	FITTING, GREASE - DISTRUBUT	1		
37	10	20362	SCREW	3	DISTRIBUTOR HOUSING TO CR	
38	12	20084	WASHER, DISTRIBUTOR HOUSII	3		
40	84	66008A 1	WIRE, GROUND	1	DISTRUBUTOR ADAPTOR TO F	
41		55805	BRACKET, STOP	1		
42	10	28636	SCREW	2	DISTRIBUTOR ADAPTOR TO ST	
43	12	35462	WASHER, STOP BRACKET FAST	2		
44	10	64022	SCREW, STOP BRACKET ADJUS	2		