



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3786	COWL, BOTTOM	1	SERIAL 00000000-03274150	
1	2115	3919	COWL, BOTTOM	1	SERIAL 02928721-09999999	
2		52862A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	35519	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A 1	HOSE, DRIP TRAY TO BOTTOM (1		
6		37638	BOOT, CONTROL CABLES - BOT	1	SERIAL 00000000-00298720	
6		39616	BOOT, CONTROL CABLES - BOT	1	SERIAL 02928721-09999999	
7		48231	SPACER, BOTTOM COWL (COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1		
10		23760	BAFFLE, BOTTOM COWL	1	SERIAL 00000000-03114543	
11	10	52867	SCREW, BAFFLE TO BOTTOM CC	3	SERIAL 00000000-03114543	
12		37445	SUPPORT, WIRING HARNESS - E	1		
13	10	37990	SCREW, WIRING HARNESS SUP	1		
13	10	31471	SCREW, WIRING HARNESS SUP	1		
14	11	46887	NUT, WIRING HARNESS SUPPO	2		
15	32	34395A 1	HOSE, TELL TALE - EXHAUST CC	1		
16		52889	NOZZLE, TELL TALE HOSE TO B	1		
17	10	35519	SCREW, TELL TALE NOZZLE TO	1		
18	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
19	54	48123	CLAP, TELL TALE HOSE TO CON	2		
20	27	56028	GASKET, POWERHEAD TO EXHA	1		4
21		56306A 2	PLATE ASSEMBLY, EXHAUST EX	1		
22	26	38970	SEAL, RUBBER - WATER INLET	1		4
23		38448	RETAINER, WATER TUBE SEA	1		
24	10	34439	SCREW, RETAINER TO EXHAU	1		
25	10	24226	SCREW, EXHAUST EXTENSION	1		
26	11	46887	NUT, EXHAUST EXTENSION PL	1		
27		58478A 1	DIVIDER ASSEMBLY, EXHAUST	1		
28	27	48801	GASKET, EXHAUST EXTENSION	1		4
29		37918	SEAL, EXHAUST EXTENSION PL	1		
30		38032	STRIP, RETAINING - EXHAUST E	1		
31	10	37571	SCREW, SEAL AND RETAINING	5		
32		60304A 9	SHIFT SHAFT ASSEMBLY, UPPE	1		
32		60304A10	SHIFT SHAFT ASSEMBLY, UPPE	1		
33	23	26600	BUSHING, SHIFT SHAFT	1		
34		55692	COUPLING, SHIFT SHAFT	1		
35		48047A 1	LINK ROD ASSEMBLY	1		
36	12	24664	WASHER, LINK ROD	1		
37	12	28720	WASHER, WAVE, LINK ROD	1		