



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45060A 7	HYDRAULIC PUMP ASSEMBLY	1		
2	25	21720	"O" RING, HYDRAULIC PUMP T	4		
3	10	28634	SCREW, FILLER - HYDRAULIC I	1		
4	12	20260	WASHER, SEALING - HYDRAULI	1		
5	10	38257	SCREW, VENT - HYDRAULIC PI	1		
6	37	55901	DECAL, INSTRUCTION - HYDRAL	1		
7		32979	BATTERY LEAD (POSITIVE)	1		
8		32988	BATTERY LEAD (NEGATIVE)	1		
9		45336	PLATE, MANIFOLD	1		
10		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	21720	"O" RING, HYDRAULIC PUMP T	4		
11	25	45254	"O" RING, CONTROL VALVE TC	1		
12	25	21720	"O" RING, CONTROL VALVE TC	1		
13	25	45253	"O" RING, CONTROL VALVE TC	2		
14	10	56500	SCREW, CONTROL VALVE AND F	4		
15	13	26992	LOCKWASHER, CONTROL VALVE	4		
16	22	38609	PLUG, CONTROL VALVE (3/8-24"	2		
17	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
18		45325	CONNECTOR AND HARNESS	1		
19		45559	TERMINAL BLOCK, HYDRAULIC F	1		
20	10	35519	SCREW, TERMINAL BLOCK TO H	2		
21	10	30663	SCREW, HANRESS LEADS TO TE	2		
22		45377	BRACKET, MOUNTING - HYDRAL	2		
23	10	24234	SCREW, MOUNTING BRACKET T	4		
24	13	39107	LOCKWASHER, MOUNTING BRA	4		
25	11	21908	NUT, MOUNTING BRACKET SCR	4		
26	10	28009	BOLT, HYDRAULIC PUMP TO BO.	2		
27	11	35304	NUT, HYDRAULIC PUMP BOLT	2		
28		25661	STARTER SOLENOID	1		
29	13	26996	LOCKWASHER, STARTER SOLEI	2		
30	11	20645	NUT, STARTER SOLENOID TERM	2		
31	13	26993	LOCKWASHER, STARTER SOLEI	2		
32	11	20083	NUT, STARTER SOLENOID TERM	2		
33		46265	BOOT, RUBBER - STARTER SOLI	2		
34		45321	BRACKET, MOUNTING - STARTE	1		
35	10	21140	SCREW, MOUNTING BRACKET T	2		
36	13	26992	LOCKWASHER, MOUNTING BRA	2		
37	10	24290	SCREW, STARTER SOLENOID TI	2		
38	13	26992	LOCKWASHER, STARTER SOLEI	2		
39	11	21825	NUT, STARTER SOLENOID SCRE	2		
40	12	27660	LOCKWASHER, HYDRAULIC PUM	1		