



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		52769	WIRING HARNESS, INTERNAL	1	
2		30050	TERMINAL, HARNESS AND ME	AR	
3	54	52876	CLAMP, WIRING HARNESS TO B	1	
4	10	45862	SCREW, WIRING HARNESS CLAI	2	
5	13	26996	LOCKWASHER, WIRING HARNE	2	
6	12	20128	WASHER, WIRING HARNESS CL	2	
7	24	28975	SPRING, GARTER - INTERNAL W	1	
8	10	20776	SCREW, GROUND WIRE TO BOT	1	
9	13	24669	LOCKWASHER, GROUND WIRE	1	
10	25	26547	GROMMET, RECTIFIER TO SWIT	1	SERIAL 00000000-03114543
11	54	26538	CLIP, WIRING HARNESS TO FRO	1	
12	10	30663	SCREW, WIRING HARNESS TO F	1	
13		22789	"D" WASHER, WIRING HARNE	1	
14		45559	TERMINAL BLOCK, STATOR LEA	1	
15	10	30663	SCREW, STATOR LEADS TO TEF	4	
16	332	2986A 4	SWITCH BOX ASSEMBLY	1	
17	11	45076	NUT, SWITCH BOX TERMINAL	7	
18	10	45218	SCREW, SWITCH BOX (3/8")	1	
19	10	24866	SCREW, SWITCH BOX TO FRON	4	
20	11	46887	NUT, SWITCH BOX SCREW	4	
21		25596	CABLE, WIRE - STARTER MOTO	1	
22	10	29197	SCREW, WIRE CABLE TO START	1	
23		57247	STOP, RUBBER - STARTER MOT	1	
24	23	56774	SPACER, COLLAR TO TOP MOUN	AR	
25		56703	COLLAR, RUBBER - STARTER MI	2	
26	50	57465A 1	STARTER MOTOR ASSEMBLY	1	
27	13	26992	LOCKWASHER, STARTER MOTO	1	
28	11	20890	NUT, STARTER MOTOR TERMIN	1	
29		25661	SOLENOID, STARTER	1	
30	10	21625	SCREW, SOLENOID TO COIL BR	2	
31	13	26992	LOCKWASHER, STARTER SOLE	2	
32		26901	BUMPER, RUBBER - STARTER S	1	
33	13	26996	LOCKWASHER, SOLENOID TERN	2	
34	11	20645	NUT, SOLENOID TERMINAL (#10	2	
35		48396	CABLE, WIRE - STARTER MOTO	1	
36	13	26993	LOCKWASHER, SOLENOID TERN	2	
37	11	20083	NUT, SOLENOID TERMINAL (5/1	2	
38		46265	BOOT, SOLENOID TERMINAL	1	
39	332	2910A 3	RECTIFIER ASSEMBLY	1	
40	10	31294	SCREW, RECTIFIER TO MOUNTI	2	
41	11	46887	NUT, RECTIFIER MOUNTING SC	2	