



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2114	3806	COWL, TOP	1		
2		52733A 3	RETAINER ASSEMBLY, TOP COV	1	SERIAL 00000000-02933900	
3		35496	PAD, BUMPER - TOP COWL RE	1	SERIAL 00000000-02933900	
4		56186	EMBLEM, TOP COWL RETAINE	1	SERIAL 00000000-02933900	
2		52733A 4	RETAINER ASSEMBLY - TOP COV	1	SERIAL 03023086-03114543	
2		52733A 5	RETAINER ASSEMBLY - TOP COV	1	SERIAL 03270480-09999999	
3		35496	PAD< BUMPER - COWL RETAI	1		
5	10	37558	SCREW, RETAINER TO TOP COV	1		
6	13	39107	LOCKWASHER, RETAINER TO TI	1		
7		49448	SHIELD, TOP COWL - REAR	1		
8	10	37370	SCREW, SHIELD TO TOP COV	3		
9	13	37371	LOCKWASHER, SHIELD SCREW	3		
10		47341A 1	ROPE, STARTER (FOR MANUAL	1		
11		52739	HINGE, COWL LATCH - TOP COV	1		
12		52737	LEVER, COWL LATCH HINGE	1		
13	17	33522	PIN, ROLL - COWL LATCH LEVE	1		
14	24	53019	SPRING, COWL LATCH HINGE	1	SERIAL 00000000-03114543	
15		55455	HOOK, TOP COWL LATCH - REAF	1		
16	10	22956	SCREW, REAR HOOK TO TOP COV	2		
17	13	26992	LOCKWASHER, REAR HOOK MO	2		
18		47271	FRAME, TOP COWL SUPPORT	1		
19	37	54108	DECAL, TIMING	1	SERIAL 00000000-02933900	
19	37	60204	DECAL, TIMING	1	SERIAL 03023086-09999999	
20		37639	MOUNT, RUBBER - TOP COWL F	3		
20		46096	MOUNT, RUBBER - TOP COWL F	OPT		
21	11	20361	NUT, RUBBER MOUNT TO TOP C	6		
22		54685	BRACKET, TOP COWL SUPPORT	1		
23		31014	MOUNT, RUBBER - REAR SUPPC	2		
24	13	26992	LOCKWASHER, RUBBER MOUNT	2		
26	11	20088	NUT, RUBBER MOUNT TO REAR	2		
27	10	26065	SCREW, REAR BRACKET TO TO	4		
28	11	46793	NUT, REAR BRACKET SCREW	4		
29	10	24234	SCREW, REAR BRACKET TO BO	4		
30	13	26993	LOCKWASHER, REAR SUPPORT	4		
31		52725A 2	BRACKET ASSEMBLY, TOP COW	1		
32	10	22040	SCREW, FRONT BRACKET TO BI	2		
33	11	46793	NUT, FRONT SUPPORT BRACKE	2		
34	10	20362	SCREW, FRONT BRACKET TO TI	2		
35	13	26993	LOCKWASHER, FRONT SUPPOR	2		
36		37640	MOUNT, RUBBER - FRONT SUPP	1		
37	13	26992	LOCKWASHER, RUBBER MOUNT	1		