



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3919	COWL, BOTTOM	1	UNITED STATES 3761034 AND I	
1	2115	5269	COWL, BOTTOM	1	UNITED STATES 3761035 THRL	
1	2115	6462	COWL, BOTTOM	1	UNITED STATES 4394237 AND I	
2		52862A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	48408	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A 1	HOSE, DRIP TRAY TO BOTTOM	1		
6		39616	BOOT, CONTROL CABLES - BOT	1		
7		76369	SPACER, BOTTOM COWL (COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1		
10		37445	SUPPORT, WIRING HARNESS - E	1		
11	10	37990	SCREW, SUPPORT TO BOTTOM	1	UNITED STATES 4112634 AND I	
11	10	31471	SCREW, SUPPORT TO BOTTOM	1	UNITED STATES 4112634 AND I	
12	11	46887	NUT, SUPPORT SCREW	2	UNITED STATES 4112634 AND I	
11	10	69029	SCREW, SUPPORT TO BOTTOM	2	UNITED STATES 4112635 AND I	
13	32	34395A 1	HOSE, TELL TALE - EXHAUST CC	1		
14		52889	NOZZLE, TELL TALE HOSE TO B	1		
15	10	48408	SCREW, TELL TALE NOZZLE TO	1		
16	22	25885	ELBOW, TELL TALE HOSE TO EX	1		
17		60304A15	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4567951 AND I	
17		60304A16	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4567951 AND I	
17		60304A45	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4567952 AND I	
17		60304A44	SHIFT SHAFT ASSEMBLY, UPPEF	1	UNITED STATES 4567952 AND I	
18	23	26600	BUSHING, SHIFT SHAFT	1		
19		55692	COUPLING, SHIFT SHAFT	1	UNITED STATES 4567951 AND I	
20		48047A 1	LINK ROD ASSEMBLY	1		
21	12	35462	WASHER, LINK ROD	2		
22	11	35045	NUT, LINK ROD	2		
23	13	29720	WASHER, WAVE - LINK ROD	1		
24		52732	BRACKET, ANCHOR - CONTROL	1		
25		39519	CAP, BARREL RETIANER - ANCH	1		
26		39618	LEVER, NYLON - SHIFT CABLE LI	1		
27	17	47175	PIN, LOCKING LEVER AND COVE	3		
28		39667	COVER, NYLON - SHIFT CABLE	1		
29		65799	LINK, LOCKING LEVER TO COVEI	1		
30	10	24234	SCREW, ANCHOR BRACKET TO	3		
31	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
32		37896	GUIDE BLOCK, LINK ROD	1		
33		52100	WEAR PLATE, LINK ROD	1		
34		28279	LATCH, CONTROL CABLE FASTE	1		