



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52769	WIRING HARNESS, INTERNAL	1	UNITED STATES 4112634 AND I	
1	84	69236	WIRING HARNESS, INTERNAL	1	UNITED STATES 4112635 AND I	
3	54	76368	CLAMP, WIRING HARNESS TO B	1		
4	10	69020	SCREW, WIRING HARNESS CLAI	2		
5	13	26996	LOCKWASHER, WIRING HARNE	2		
6	12	30164	WASHER, WIRING HARNESS CL	2		
7	24	28975	SPRING, GARTER - INTERNAL W	1		
8	10	20776	SCREW, GROUND WIRE TO BOT	1		
9	13	26992	LOCKWASHER, GROUND WIRE	1		
10	54	26538	CLIP, STATOR LEADS TO BLOCK	1		
11	10	62568	SCREW, WIRING HARNESS TO F	1		
12		69205	"D" WASHER, WIRING HARNESS	1		
13		45559	TERMINAL BLOCK, STATOR LEA	1		
14	10	62568	SCREW, STATOR LEADS TO TEF	4		
15	332	2986A 4	SWITCH BOX ASSEMBLY	1	UNITED STATES 3761034 AND I	
15	332	2986A21	SWITCH BOX ASSEMBLY	1	UNITED STATES 3761035 AND I	
16	11	45076	NUT, SWITCH BOX TERMINAL	7		
17	10	29794	SCREW, SWITCH BOX (3/8")	1		
18	10	64279	SCREW, SWITCH BOX TO FRON	4		
19	11	46887	NUT, SWITCH BOX SCREW	4		
20		25596	CABLE, WIRE - STARTER MOTO	1		
21	10	69035	SCREW, WIRE CABLE TO START	1		
22		57247	STOP, RUBBER - STARTER MOT	2		
23	23	56774	SPACER, COLLAR TO TOP MOUN	AP		
24		56703	COLLAR, RUBBER - STARTER MI	2		
25	50	64975	STARTER MOTOR ASSEMBLY (P	1		
25	50	72467	STARTER MOTOR ASSEMBLY (B	1		
26	13	26992	LOCKWASHER, STARTER MOTO	1		
27	11	64015	NUT, STARTER MOTOR TERMIN	1		
28		25661	SOLENOID, STARTER	1	UNITED STATES 4112634 AND I	
29	10	21625	SCREW, SOLENOID TO COIL BR	2	UNITED STATES 4112634 AND I	
28	89	68258	SOLENOID, STARTER	1	UNITED STATES 4112635 AND I	
29	10	38601	SCREW, SOLENOID TO BOTTOM	2	UNITED STATES 4112635 AND I	
30	13	26992	LOCKWASHER, STARTER SOLE	2		
31		26901	BUMPER, RUBBER - STARTER S	1		
32	13	26996	LOCKWASHER, SOLENOID TER	2		
33	11	68219	NUT, SOLEMOID TERMINAL (#1C	2		
34		48396	CABLE, WIRE - STARTER MOTO	1	UNITED STATES 4112634 AND I	
34	84	69237	CABLE, WIRE - STARTER MOTO	1	UNITED STATES 4112635 AND I	
35	13	26993	LOCKWASHER, SOLENOID TER	2		
36	11	68292	NUT, SOLENOID TERMINAL (#1C	2		