



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		64165A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3761034 AND I	
1		66096A	1 PLATE ASSEMBLY, EXHAUST EX	1	UNITED STATES 3761035 AND I	
2	23	27132	BUSHING, NYLON - EXHAUST E	1	UNITED STATES 3761035 AND I	
3		37918	SEAL, EXHAUST EXTENSION F	1		
4		38032	STRIP, RETAINING - EXHAUST	1		
5	10	37571	SCREW, SEAL AND RETAINING	5		
6	17	23784	DOWEL PIN, EXHAUST EXTEN	2		
7	27	64173	GASKET, POWERHEAD TO EXTE	1	UNITED STATES 3761034 AND I	4
7	27	66101	GASKET, POWERHEAD TO EXTE	1	UNITED STATES 3761035 THRL	4
7	27	69238	GASKET, POWERHEAD TO EXTE	1	UNITED STATES 4112635 AND I	4
8	10	62644	SCREW, ADAPTOR PLATE ATTA	1	UNITED STATES 3761034 AND I	
9	13	26993	LOCKWASHER, ADAPTOR PLATE	1	UNITED STATES 3761034 AND I	
8	10	66023	SCREW, ADAPTOR PLATE TO HI	2	UNITED STATES 3761035 AND I	
10	10	66023	SCREW, HOUSING PLATE TO DF	7	UNITED STATES 3761035 AND I	
11	27	60945	GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3761034 AND I	4
11	27	66102	GASKET, PLATE TO DRIVE SHAF	1	UNITED STATES 3761035 AND I	4
12	12	34437	WASHER, DRIVE SHAFT HOUSIN	7	UNITED STATES 3761034 AND I	
13	11	64809	NUT, DRIVE SHAFT HOUSING S	7	UNITED STATES 3761034 AND I	
14	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
15		64164A	2 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3761034 AND I	
15		66098A	2 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 3761035 THRL	
15		74257A	3 PLATE ASSEMBLY, DRIVE SHAF	1	UNITED STATES 4394237 AND I	
16	26	38970	SEAL, RUBBER - WATER INLE	1		4
17	17	23784	DOWEL PIN, DRIVE SHAFT HO	2		
18	27	62362	GASKET, MEGAPHONE TO DRIVI	1		4
19		60437	MEGAPHONE, EXHAUST	1		
20	10	60480	SCREW, MEGAPHONE TO DRIVE	3		
21	12	29245	WASHER, MEGAPHONE SCREW	3		
22	12	25970	WASHER, POWERHEAD STUD	6		
23	11	34932	NUT, POWERHEAD STUD	6		