 


**Quicksilver Lubrication/Sealant  
 Application Points**

 Loctite 271 (Obtain Locally)

EXHAUST PLATE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42954A	EXHAUST PLATE ASSEMBLY	1		
2	17	23784	DOWEL PIN	3		
3	10	40011151	SCREW (M8 X 35)	2		
3	10	40011158	SCREW (M8 X 70)	1		
4		44344	2 MOUNT	1		
5	10	40107 50	SCREW	4		
6	10	42974	SCREW	2		
7	12	93416	1 WASHER	2		
8	12	28421	WASHER	2		
9	11	90099	NUT	2		
10	27	43008	6 GASKET	1		1
11		42966	4 EXHAUST TUBE	1		
12	10	40011151	SCREW	6		
13		42962	SEAL-EXHAUST TUBE	1		
14	25	89417	1 GROMMET	1		
15	32	824660	1 WATER TUBE	1	(LONG)	
15	32	824660	2 WATER TUBE	1	(X-LONG)	
16		824661	CLAMP	1		
17		814080	SEAL (UPPER)	1		
18	10	40107 50	SCREW (M8 X 50)	2		
19		42953A	5 BRACKET ASSEMBLY (LOWER)	1	(BLACK)	
19		42953A	6 BRACKET ASSEMBLY (LOWER)	1	(GRAY)	
19		42953A	7 BRACKET ASSEMBLY (LOWER)	1	(TRACKER-GRAPHITE GRAY)	
20		43405	SEAL	1		
21	25	12602	1 GROMMET	1	(S/#-0G359967 & BELOW)	
22	25	19565	GROMMET	1	(S/#-0G359968 & UP)	
23	10	817427 50	SCREW (M8 X 50)	3		
24	23	48237	BUSHING	1		
25		79932A	19 SHIFT SHAFT (UPPER)	1	(USA-0G590000/BEL-9973100 & I	3
26		42912A	3 SHIFT LINK	1		3
25		79932A	9 SHIFT SHAFT (UPPER)	1	(USA-0G589999/BEL-9973099 & I	
26		42912A	1 SHIFT LINK	1		
27	23	48475	BUSHING	2		
28	11	826833	6 NUT	1		
29	23	813745	SPACER	1	(LONG)	
29	23	11289	SPACER	1	(X-LONG)	
30		43585	COUPLING	1		
-	27	13461A90	GASKET SET	1		