



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	3167	COWL, BOTTOM	1		
1	2115	3615	COWL, BOTTOM	.1		
2		47261A 1	CRIP TRAY ASSEMBLY, BOTTOM	1		
2		52862A 2	CRIP TRAY ASSEMBLY, BOTTOM	.1		
3		37940	PAD, SOUND - DRIP TRAY	1,1		
4	10	34222	SCREW, DRIP TRAY TO BOTTOM	4,4		
5	32	52032	HOSE, DRIP TRAY TO BOTTOM	1,1		
6		37638	BOOT, CONTROL CABLES - BOT	1,1		
7		48231	SPACER, BOTTOM COWL (COWL	1,1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2,2		
9		37637	BOOT, FUEL CONNECTOR - BOT	1,1		
10		23760	BAFFLE, BOTTOM COWL	1,1		
11	10	21106	SCREW, BAFFLE TO BOTTOM CC	3		
11	10	52867	SCREW, BAFFLE TO BOTTOM CC	.3		
12		37445	SUPPORT, WIRING HARNESS	1,1		
13	10	37990	SCREW, WIRING HARNESS SUP	1,1		
13	10	37561	SCREW, WIRING HARNESS SUP	1,1		
14	11	46887	NUT, WIRING HARNESS SUPPOI	2,2		
15	32	26407	HOSE, TELL TALE - EXHAUST CC	1,1		
16	22	29111	CONNECTOR, TELL TALE HOSE	1		
16A		52889	NOZZLE, TELL TALE HOSE TO B	.1		
17	10	34222	SCREW, TELL TALE NOZZLE TO	.1		
18	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1		
19	54	48123	CLAMP, TELL TALE HOSE TO CO	2,2		
20	27	48713	GASKET, POWERHEAD TO EXHA	1		4
21		48712A 2	PLATE ASSEMBLY, EXHAUST EX	1		
21		52932A 2	PLATE ASSEMBLY, EXHAUST EX	.1		
22	26	38970	SEAL, RUBBER - WATER INLET	1,1		4
23		38448	RETAINER, WATER TUBE SEA	1,1		
24	10	34439	SCREW, RETAINER TO EXHAU	1,1		
25	10	24226	SCREW, EXHAUST EXTENSION	1,1		
26	11	46887	NUT, EXHAUST EXTENSION PL	1,1		
27	27	48801	GASKET, EXHAUST EXTENSION	1,1		4
28		37918	SEAL, EXHAUST EXTENSION PL	1,1		
29		38032	STRIP, RETAINING - EXHAUST E	1,1		
30	10	37571	SCREW, SEAL AND RETAINING	5,5		
31		49904A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1	SERIAL 00000000-02653879	
31		49905A 1	SHIFT SHAFT ASSEMBLY, UPPE	1,1	SERIAL 00000000-02653879	
31		53889A 4	SHIFT SHAFT ASSEMBLY, UPPE	.1	SERIAL 02653880-09999999	
31		53889A 3	SHIFT SHAFT ASSEMBLY, UPPE	.1	SERIAL 02653880-09999999	
32	22	26600	PUSHING, SHIFT SHAFT	1	SERIAL 02653880-09999999	