



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1348	3368	CARBURETOR ASSEMBLY, COMI	3		
1	1348	3547	CARBURETOR ASSEMBLY, COMI	3		
1	1348	3718	CARBURETOR ASSEMBLY, COMI	,3		
2	1399	110A 1	FLOAT ASSEMBLY SEE NOTE	3,3		
3			PIN, FLOAT LEVER PINION SE	6,6		3
4			LEVER, FLOAT (LOWER)	3,3		3
5			LEVER, FLOAT (UPPER)	3,3		3
6	1399	1473	INLET NEEDLE, SEAT AND GA	3,3		3
7			GASKET, INLET SEAT	3,3		3,0
8			GASKET, FLOAT BOWL COVER	3,3		3,0
9	1399	1133	COVER, FLOAT BOWL	3,3		
10	10	20854	SCREW, FLOAT BOWL COVER	3		
11	10	25850	SCREW, FLOAT BOWL COVER	3		
10	10	52195	SCREW, FLOAT BOWL COVER	,3		
11	10	52196	SCREW, FLOAT BOWL COVER	,3		
12	12	52197	LOCKWASHER, FLOAT BOWL C	,6		
13			GASKET, STRAINER COVER (L	3,3		3,0
14	1399	1754	SCREEN, FILTER	3,3		
15			GASKET, STRAINER COVER (S	3,3		3,0
16	1399	1930	COVER, STRAINER	3,3		
17			GASKET, STRAINER COVER SC	3,3		3,0
18	10	25822	SCREW, STRAINER COVER FA	3,3		3
19	10	20847	SCREW, THROTTLE STOP LEV	3,3		3
20	1399	97	LEVER, THROTTLE STOP (SEE	3,3		
21	1399	3527	SHAFT, THROTTLE	3,3		
22			TUBE, IDLE	3,3		3
22			TUBE, IDLE	,3		3
23	10	23178	SCREW, BODY (IDLE TUBE)	3,3		
24			GASKET, IDLE TUBE	3,3		3,0
25			SCREW AND LOCKWASHER, T	6,6		3
26	1399	3528	SHUTTER, THROTTLE	3,3		
27			SPRING, IDLE ADJUSTMENT S	3,3		3
28	1399	3515	SCREW, IDLE ADJUSTMENT	3,3		3
29	10	28405	SCREW, PLUG - MAIN FUEL JE	3,3		
30			GASKET, JET CHANNEL PLUG	3,3		3,0
31	1399	3517	JET, MAIN FUEL (.084)	OPT,		
31	1399	3518	JET, MAIN FUEL (.082) - STAND	3,		3
31	1399	3519	JET, MAIN FUEL (.080)	OPT,		
31	1399	3520	JET, MAIN FUEL (.0785)	OPT,OI		
31	1399	3796	JET, MAIN FUEL (.076) - STAND	,3		3
31	1399	3794	JET, MAIN FUEL (.074)	OPT,		