



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	45	47982	DRIVE SHAFT, DISTRIBUTOR	1,1		
2		48667	PILOT, DISTRIBUTOR MOUNTING	1,1		
3	24	33453	SPRING, DISTRIBUTOR PILOT T	1,1	WHEN ORDERING REPLACEME	
3	24	54639	SPRING, DISTRIBUTOR PILOT T	1,1	WHEN ORDERING REPLACEME	
4		30109	GROUND STRAP, DISTRIBUTOR	1,1		
5	10	30663	SCREW, GROUND STRAP TO CF	1,1		
6	10	20532	SCREW, DISTRIBUTOR PILOT T	4,	USE WITH 2 3/4" SPRING -SEE F	
6	10	20532	SCREW, DISTRIBUTOR PILOT T	3,3	USE WITH 3 17/32" SPRING SE	
6	10	27281	SCREW, DISTRIBUTOR PILOT T	1,1	USE WITH 3 17/32" SPRING SE	
7	12	20533	WASHER, DISTRIBUTOR PILOT :	1,1	USE WITH 3 17/32" SPRING SE	
7	13	26992	LOCKWASHER, DISTRIBUTOR P	4,4		
8		48676	LINK, DISTRIBUTOR PILOT TO D	1,1		
9	23	26856	BUSHING, NYLON - DISTRIBUTO	1,1		
10	12	20583	WASHER, DISTRIBUTOR PILOT I	1,1		
11	18	20180	COTTER PIN, LINK TO DISTRIBUTU	1,1		
12		48677	SWIVEL, LINK TO DISTRIBUTOR	1,		
12		53635	SWIVEL, LINK TO DISTRIBUTOR	,1		
13	11	25168	NUT, JAM - LINK TO SWIVEL	2,		
13	11	25168	NUT, JAM - LINK TO SWIVEL	,1		
13	11	30506	NUT, JAM - LINK TO SWIVEL	,1		
14	12	45484	WASHER, DISTRIBUTOR TO PIU	1,1		
15	30	20066	BEARING, BALL - DISTRIBUTOR	1,1		
16		48691	CAM, DISTRIBUTOR	1,1		
17	10	48673	SCREW, CAM FOLLOWER TO DI	1,1		
18		48678	CAM FOLLOWER, DISTRIBUTOR	1,1		
19		48690	COLLAR, ECONOMIZER	1,1		
20	10	49990	SCREW, DISTRIBUTOR CAM TO	2,2		
21	12	20128	WASHER, DISTRIBUTOR CAM SI	2,2		
22	22	25094	FITTING, GREASE - ECONOMIZER	1,1		
23		48692	COLLAR, THROTTLE ACTUATOR	1,1		
24	10	48675	SCREW, ADJUSTING - THROTTL	1,1		
25	11	20890	NUT, ADJUSTING SCREW	1,1		
26		52023	CAP, NYLON - ADJUSTING SCRE	1,1		
27		48671	PLATE, THROTTLE ACTUATOR	1,1		
28		54239	CAM, THROTTLE ACTUATOR PL	1,1		
29	10	37892	SCREW, ACTUATOR PLATE TO E	2,2		
30	13	26996	LOCKWASHER, ACTUATOR PLA	2,2		
31	12	20128	WASHER, ACTUATOR PLATE SC	2,2		
32	23	48674	SPACER, ACTUATOR PLATE SCF	2,2		
33		48666A	ADAPTOR ASSEMBLY, DISTRIBL	1,1		
34	22	25094	FITTING, GREASE - DISTRIBUTO	1,1		