



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30263A	FUEL PUMP ASSEMBLY - UPPER	1		
1		53156A	FUEL PUMP ASSEMBLY - UPPER	.1		
2	21	30430A	CHECK VALVE ASSEMBLY	1.1		
3		23014A	DIAPHRAGM KIT	1.1		4
4			GASKET, CHECK VALVE TO	2.2		4
5			GASKET, FUEL PUMP	2.2		4
6			GASKET, FUEL PUMP COVE	1.1		4
7		23004	RETAIER, CHECK VALVE	1.1		
8	10	20037	SCREW, RETAINER TO HOUSII	2.2		
9		30461A	FUEL PUMP ASSEMBLY - LOWEF	1.1		
2	21	30430A	CHECK VALVE ASSEMBLY	1.1		
3		23014A	DIAPHRAGM KIT	1.1		4
4			GASKET, CHECK VALVE TO	2.2		4
5			GASKET, FUEL PUMP	2.2		4
6			GASKET, FUEL PUMP COVE	1.1		4
7		23004	RETAINER, CHECK VALVE	1.1		
8	10	20037	SCREW, RETAINER TO HOUSII	2.2		
10		30275	COVER, FUEL PUMP	2.2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	1		
12	10	30274	SCREW, FUEL PUMP MOUNTING	2		
11	10	38036	SCREW, FUEL PUMP MOUNTING	.1		
12	10	30273	SCREW, FUEL PUMP MOUNTING	.2		
13	10	38036	SCREW, FUEL PUMP MOUNTING	1.1		
14	10	30273	SCREW, FUEL PUMP MOUNTING	2.2		
15	32	32256A	FUEL LINE ASSEMBLY, PUMP TC	1.1		
16	22	30174	ELBOW, UPPER CARBURETOR	1.1		
17	22	30175	SLEEVE, CARBURETOR STRAINI	1.1		
18	22	30177	NUT, UPPER CARBURETOR STF	1.1		
19	54	22627	CLIP, FUEL LINE TO CYLINDER B	1.1		
20	10	30663	SCREW, FUEL LINE CLIP TO CYL	1.1		
21		22789	"D" WASHER, FUEL LINE CLIP SI	1.1		
22	32	31552A	FUEL LINE ASSEMBLY, PUMP TC	1.1		
23	32	31553A	FUEL LINE ASSEMBLY, PUMP TC	1.1		
24	22	30174	ELBOW, LOWER FUEL PUMP INL	1.1		
25	22	30175	SLEEVE, FUEL PUMP INLET ELBI	1.1		
26	22	30177	NUT, FUEL PUMP INLET ELBOW	1.1		
27	32	30176	FUEL LINE, ADAPTOR TO LOWEI	1.1		
28	22	37682	ELBOW, FUEL LINE TO ADAPTOR	1		
29		30186	ADAPTOR, CHECK UNIT (FUEL LI	1.1		
30		30187	STEM, CHECK UNIT ADAPTOR	1.1		
31	25	20415	"O" RING, ADAPTOR STEM	1.1		4