



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2460A38	GEAR HOUSING ASSEMBLY, COI	1,	
-	1623	2460A39	GEAR HOUSING ASSEMBLY, COI	1,	
-	1623	3486A 8	GEAR HOUSING ASSEMBLY, COI	.1	
-	1623	3486A 9	GEAR HOUSING ASSEMBLY, COI	.1	
1	1623	2460A20	GEAR HOUSING ASSEMBLY	1,	
1	1623	3486A 4	GEAR HOUSING ASSEMBLY	.1	
2	16	45199	STUD, GEAR HOUSING TO D	1,1	
3	16	45198	STUD, GEAR HOUSING TO D	2,	
3	16	52614	STUD, GEAR HOUSING TO D	.2	
4	16	36292	STUD, WATER PUMP BASE A	1,1	
5	16	37435	STUD, WATER PUMP BASE A	2,2	
6	31	32898	BEARING, ROLLER - DRIVE S	1,1	
7	45	47433	DRIVE SHAFT (SHORT SHAFT)	1,1	
7	45	47434	DRIVE SHAFT (LONG SHAFT)	1,1	
8	43	49751	GEAR, PINION - DRIVE SHAFT	1,1	
9	11	35921	NUT, PINION GEAR TO DRIVE	1,1	
10	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR,AR	
11	30	20464	BEARING, BALL - DRIVE SHAFT	1,1	SERIAL 00000000-02653879
11	30	54215	BEARING, BALL - DRIVE SHAFT	.1	SERIAL 02653880-09999999
12	53	30726	RING, RETAINING - BALL BEAR	1,1	
10	15	30278A 1	SHIM, WATER PUMP BASE TO	AR,AR	
13	27	32438	GASKET, WATER PUMP BASE	1,1	4
14	25	30224	"O" RING, WATER PUMP BASE	1,1	4
15	46	38931A 1	WATER PUMP BASE ASSEMBL	1,	
15	46	48747A 1	WATER PUMP BASE ASSEMBL	.1	
16	26	31489	OIL SEAL, WATER PUMP BAS	1,1	
17	26	31507	OIL SEAL, WATER PUMP BAS	1,1	
18	17	35973	DOWEL PIN, WATER PUMP E	2,2	
19	27	32433	GASKET, LOWER - WATER PUI	1,1	4
20	27	32435	PLATE, FACE - WATER PUMP E	1,1	
21	27	32434	GASKET, UPPER - FACE PLATE	1,1	
22	46	37433A 1	WATER PUMP BODY ASSEMBL	1,	
22	46	48743A 1	WATER PUMP BODY ASSEMBL	.1	4
23		30915	INSERT, WATER PUMP BOD	1,	
23		48752	INSERT, WATER PUMP BOD	.1	
24	26	31507	OIL SEAL, WATER PUMP BOI	1,1	
25	26	38970	SEAL, RUBBER - WATER INLI	1,1	4
26	47	30221	IMPELLER - WATER PUMP	1,1	
27	17	29967	PIN, IMPELLER DRIVE	1,1	
28	10	30720	SCREW, WATER PUMP BODY	1,1	
29	12	26992	LOCKWASHER, WATER PUMP	2,	