



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2460A38	GEAR HOUSING ASSEMBLY, CO	1	
-	1623	2460A39	GEAR HOUSING ASSEMBLY, CO	1	
-	1623	3486A 8	GEAR HOUSING ASSEMBLY, CO	.1	
-	1623	3486A 9	GEAR HOUSING ASSEMBLY, CO	.1	
1	1623	2460A20	GEAR HOUSING ASSEMBLY SE	1	
1	1623	3486A 4	GEAR HOUSING ASSEMBLY SE	.1	
55		36288	CAM, SHIFT	1,1	SERIAL 00000000-02709827
55		54346	CAM, SHIFT	.1	SERIAL 02709828-09999999
56		30625	FOLLOWER, CAM	1,1	
57		30624	SLIDE, CROSS PIN	1,1	
58	24	30622	SPRING, COMPRESSION - CAM	1,1	
59	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR	
60	31	30894A 1	TAPERED ROLLER BEARING A	1,1	
61	31	30895	BEARING, ROLLER - FORWARD	1,1	
62	43	34085	FORWARD GEAR ASSEMBLY	1	
62	43	53100	FORWARD GEAR ASSEMBLY	.1	
63	52	34239	RATCHET, SLIDING CLUTCH	1,1	
64	17	30632	PIN, CROSS - RATCHET TO PR	1,1	
65	24	30893	SPRING, RETAINING - CROSS	1,1	
66	44	47901	SHAFT, PROPELLER (COARSE	1	
66	44	52542	SHAFT, PROPELLER (FINE THF	.1	
67	43	31887	REVERSE GEAR ASSEMBLY	1,1	
68	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR	
69	12	30633	WASHER, THRUST - BEARING	1,1	
70	30	31265	BEARING, BALL - REVERSE GE	1,1	
71	25	29976	"O" RING, BEARING CARRIER	1,1	4
72		31284A 1	BEARING CARRIER ASSEMBLY	1	
72		52132A 1	BEARING CARRIER ASSEMBLY	.1	
73	31	30956	BEARING, ROLLER - BEARING	1,1	
74	26	30550	OIL SEAL, BEARING CARRIEF	2,2	
75	28	30281	KEY, LOCATING - BEARING CA	1,1	
76	12	29957	WASHER, GEAR HOUSING CO	1	
77		31037	COVER, GEAR HOUSING	1	
76	14	52700	TAB WASHER, GEAR HOUSING	.1	
77		52699	COVER, GEAR HOUSING	.1	
78		31640A 1	TRIM TAB, GEAR HOUSING	1,1	
79	10	47580	SCREW, TRIM TAB TO GEAR H	1,1	
80	12	45176	WASHER, GEAR HOUSING TO	2,2	
81	11	34933	NUT, GEAR HOUSING TO DRIVE	2,2	
82	10	34353	SCREW, GEAR HOUSING TO DR	1,1	
82		46961A 1	THRUST HUB AND WASHER AS	1,1	PART OF A 1623 2486A8 AND A