



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		48150	WIRING HARNESS, INTERNAL	1		
1		52769	WIRING HARNESS, INTERNAL	.1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3		26079	PLATE, WIRING HARNESS TO BI	1		
4	10	45893	SCREW, HARNESS PLATE FASTI	4		
5	54	52876	CLAMP, WIRING HARNESS TO B	.1		
6	10	45862	SCREW, WIRING HARNESS CLAI	.2		
7	13	26996	LOCKWASHER, WIRING HARNE	.2		
8	12	20128	WASHER, WIRING HARNESS CL	.2		
9	24	28975	SPRING, GARTER - INTERNAL W	1,1		
10	10	20776	SCREW, GROUND WIRE TO BOT	1,1		
11	13	25244	LOCKWASHER, GROUND WIRE	1,1		
12	13	24669	LOCKWASHER, GROUND WIRE	1,1		
13	25	26547	GROMMET, RECTIFIER TO SWIT	1,1		
14	54	26538	CLIP, WIRING HARNESS TO FRO	1,1		
15	10	30009	SCREW, WIRING HARNESS TO F	1,1		
16		22789	"D" WASHER, WIRING HARNE	1,1		
17		45559	TERMINAL BLOCK, STATOR LEA	1,1		
18	10	28192	SCREW, TERMINAL BLOCK FAST	2		
18	10	48409	SCREW, TERMINAL BLOCK FAST	.2		
19	10	30663	SCREW, STATOR LEADS TO TEF	2,2		
20	332	2986A 4	SWITCH BOX ASSEMBLY	1,1		
21	12	45075	WASHER, SWITCH BOX TERMIN	7,7		
22	11	45076	NUT, SWITCH BOX TERMINAL	7,7		
23	10	45218	SCREW, SWITCH BOX (3/8")	1,1		
24	10	24866	SCREW, SWITCH BOX TO FRO	4,4		
25	11	46887	NUT, SWITCH BOX SCREW	4,4		
26		25596	CABLE, WIRE - STARTER MOTO	1,1		
27	10	29197	SCREW, WIRE CABLE TO START	1,1		
28	50	48643A 1	STARTER MOTOR ASSEMBLY	1,1		
29	10	20362	SCREW, STARTER MOTOR CRAI	1,1		
30	10	31984	SCREW, STARTER MOTOR CRAI	1,1		
31	13	26993	LOCKWASHER, STARTER MOTO	2,2		
32		48500	BRACKET, STARTER MOTOR SU	1		
32		53507	BRACKET, STARTER MOTOR SU	.1		
33	10	25299	SCREW, STARTER MOTOR TO S	2,2		
34	13	26993	LOCKWASHER, STARTER MOTO	2,2		
35	12	26825	WASHER, STARTER MOTOR SCI	2,2		
36	10	32293	SCREW, SUPPORT BRACKET TC	2,2		
37	12	26825	WASHER, SUPPORT BRACKET S	2,2		
38	11	46792	NUT, SUPPORT BRACKET SCRE	2,2		