



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	3909A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1623-3909A3 AND A5 GEAR HI	
-	1623	3909A 6	GEAR HOUSING ASSEMBLY, CO	1	A-1623-3909A3 AND A5 GEAR HI	
1	1623	3909A 6	GEAR HOUSING ASSEMBLY	1		
2		55662	SCREEN, WATER INLET	2	EARLY MODELS ONLY	
3	24	57430	SPRING, WATER INLET SCRE	1	EARLY MODELS ONLY	
4	17	21438	DOWEL PIN, GEAR HOUSING	2		
5	16	57921	STUD, GEAR HOUSING TO D	1		
6	16	57920	STUD, GEAR HOUSING TO D	2		
7	16	56297	STUD, WATER PUMP BASE A	1		
8	16	57919	STUD, WATER PUMP BASE A	2		
9	31	32898	BEARING, ROLLER - DRIVE S	1		
10	45	47433	DRIVE SHAFT (SHORT SHAFT)	1	SERIAL 00000000-02910020	
10	45	47434	DRIVE SHAFT (LONG SHAFT)	1	SERIAL 00000000-02910020	
10	45	57026A 1	DRIVE SHAFT (SHORT SHAFT)	1	SERIAL 02940021-09999999	
10	45	57025A 1	DRIVE SHAFT (LONG SHAFT)	1	SERIAL 02940021-09999999	
11	43	55688	GEAR, PINION - DRIVE SHAFT	1		
12	11	35921	NUT, PINION GEAR TO DRIVE :	1		
13	15	30278A 1	SHIM, DRIVE SHAFT BALL BEA	AR		
13	15	30278A 1	SHIM, WATER PUMP BASE TO	AR		
14	30	54215	BEARING, BALL - DRIVE SHAFT	1		
15	53	30726	RING, RETAINING - BALL BEAR	1		
16	27	32438	GASKET, WATER PUMP BASE	1		4
17	25	30224	"O" RING, WATER PUMP BASE	1		4
18	46	48747A 1	WATER PUMP BASE ASSEMBL	1		
19	26	31489	OIL SEAL, WATER PUMP BAS	1		
20	26	31507	OIL SEAL, WATER PUMP BAS	1		
21	17	35973	DOWEL PIN, WATER PUMP E	2		
22	27	32433	GASKET, LOWER - WATER PUI	1		4
23		32435	PLATE, FACE - WATER PUMP E	1		
24	27	32434	GASKET, UPPER - FACE PLATE	1		4
25	46	48743A 1	WATER PUMP BODY ASSEMBL	1		4
26		48752	INSERT, WATER PUMP BOD	1		
27	26	31507	OIL SEAL, WATER PUMP BO	1		
28	26	38970	SEAL, RUBBER - WATER INLI	1		4
29	47	30221	IMPELLER - WATER PUMP	1		
30	28	56654	KEY, IMPELLER DRIVE	1		
31	10	30720	SCREW, WATER PUMP BODY	1		
32	13	26992	LOCKWASHER, WATER PUMP	1		
33	12	29245	WASHER, WATER PUMP BOD	3		
34	11	35045	NUT, WATER PUMP FASTENIN	2		
35	12	26001	WASHER, WATER PUMP BOD	1		